



Ages 3 and Up
2 to 4 Players

The Very Hungry Caterpillar™

 
Twirl & Toss

game

Instructions

Contents

- 1 Twirling The Very Hungry Caterpillar
(2 AA batteries required. Not included.)
- 1 Grass Hill
- 1 Branch
- 2 Leaves
- 12 Plush Fruit:
 - 3 Apples (red) 3 Pears (green)
 - 3 Plums (blue) 3 Oranges (orange)

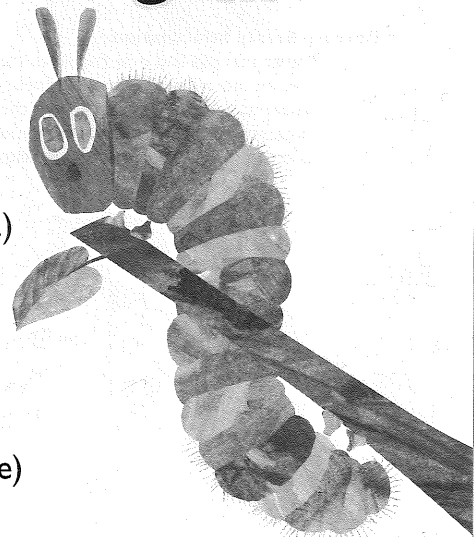

Setup:

Before playing, follow the assembly instructions for The Very Hungry Caterpillar.

Each player picks one type of fruit (apples, pears, oranges, plums) and holds all three pieces of that fruit or places them down in front of them.

Gameplay:

Frolicking Fruit Fun – The oldest player turns the game on by pressing the button on top of the hill. All players toss their fruit as fast as they can at the twirling caterpillar. If your fruit misses the caterpillar, get up and go grab it! The first player to have his/her three pieces of fruit stuck on the caterpillar or the leaves is the winner. If you play more than one round, take turns alternating who presses the start button.

 
 **WARNING:**
CHOKING HAZARD—Small parts.
Not for children under 3 years.

Assembly Instructions

Assemble The Very Hungry Caterpillar by following the instructions below.

Step 1 – Install batteries

- Use a small screwdriver to loosen the screw and remove the lid.
- Insert 2 AA batteries into the batteries compartment. Make sure the positive and negative ends match the correct contacts.
- Replace the lid and tighten the screw.


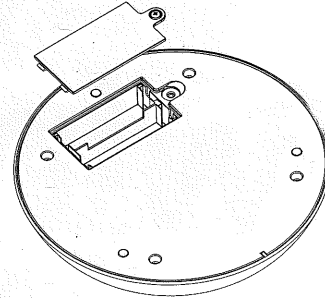


Battery Safety Information:

- Never mix old and new batteries (replace all batteries at the same time).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy and disposed of safely (do not dispose of batteries in fire, batteries may explode or leak).

Step 2 – Assemble the branch onto the grass hill

  - Slide the branch into the open hole in the grass hill.
- Make sure the branch and grass hill fit together tightly.

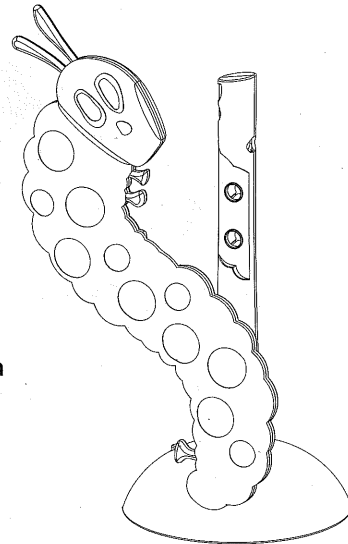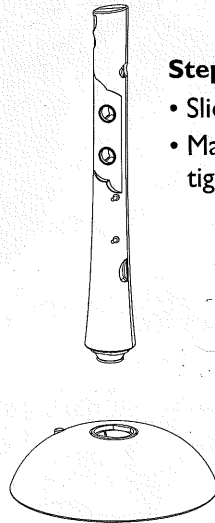


Step 3 – Assemble the Caterpillar onto the branch

- Slide the Caterpillar body into the 2 round slots on the branch.
- Make sure the body fits tightly together with the branch.


Step 4 – Assemble the leaves

 - Slide the 2 leaves into the 2 round slots on the 2 sides of the branch.
- Be sure the 2 leaves fit tightly into the branch.

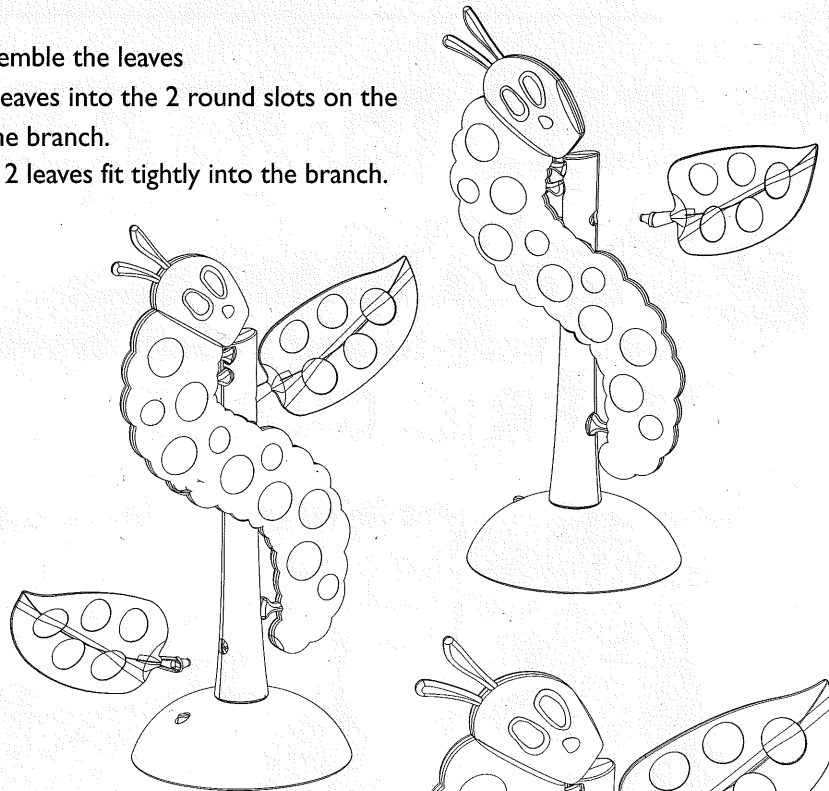

Step 5 – Start playing

 - Once the caterpillar is fully assembled, press down on the button on top of the grass hill. The Caterpillar will spin.
- Press the button again to stop the Caterpillar from spinning.
- The Very Hungry Caterpillar is now ready to play the Twirl & Toss game!

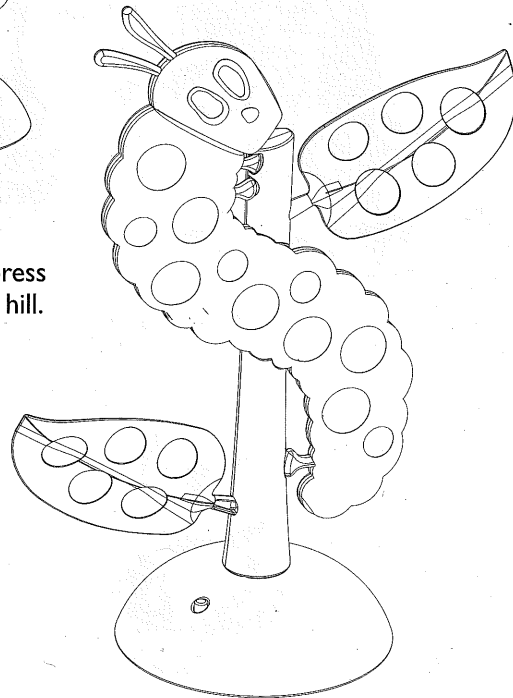

See our entire line of
games and puzzles at:

 **AreYouGame.com**

© 2013 University Games Corporation, San Francisco, CA 94110. All Rights Reserved. Ugames Australia, 71-73 Chandos Street, St Leonards NSW, Australia 2065. Retain this information for future reference. Made in China. B009620 10/13

© 2013 Eric Carle LLC. ERIC CARLE, THE VERY HUNGRY CATERPILLAR, THE WORLD OF ERIC CARLE logo, the Caterpillar logo and related designs, logos and names are trademarks and/or registered trademarks of Eric Carle LLC. All rights reserved. "The Very Hungry Caterpillar" is published by Penguin Group (USA).