

USING THE FOAMING BOTTLES

These bottles are fully serviceable. If they stop foaming usually a good shake will get them going again or they may have some dirt or hair inside foaming mechanism. They will snap apart completely (6 pieces + ball bearing) for cleaning careful to not lose the ball bearing in the bottom. 1, Pull out spout on top, 2, push out middle from screw top, 3, pull out plunger, 4, pull out spring mechanism, 5, carefully wash clear diaphragm (6th piece) in bottom of plunger and all other parts in water. Re-assemble in reverse order. Do not fill above bottom of foaming mechanism as this needs to suck in air to make foam. Also they will not foam if soap/water mix is too strong.