


IN-GROUND SEPTIC TANKS

TOP VIEW

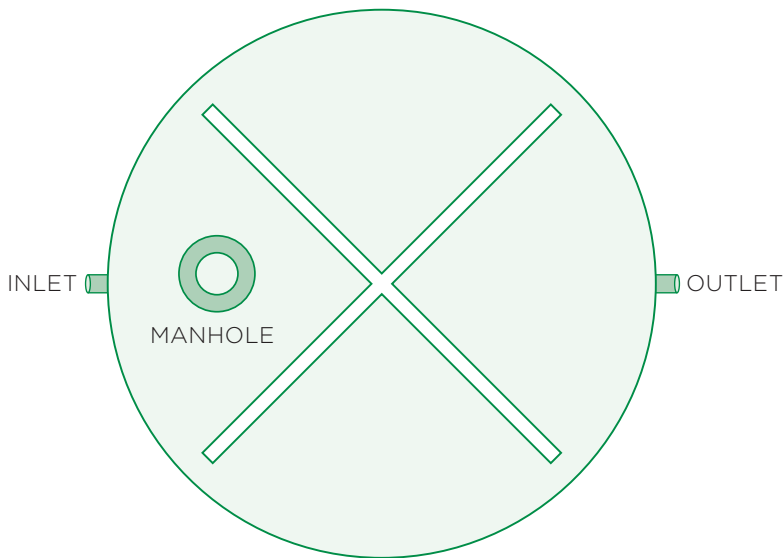

SEPTIC TANK SPECIFICATIONS

Your septic tank comes fitted with PVC "inlet" and "outlet" piping assemblies as standard.

- The "inlet" assembly is located on the tank wall directly beneath the inspection manhole opening. It is fitted with a 300 mm extension pipe.
- The "outlet" assembly is located on the tank wall on the opposite side to the inlet, and is slightly lower. It is fitted with a 500mm extension pipe.
- The extension pipes connected to the inlet and outlet "T" connections must point directly to the bottom of the tank.
- Tanks can be purchased without standard fittings.

SIDE VIEW

