


HUNGRY ROBOT PEDALS

I would like to extend a sincere thank you for joining the Hungry Robot family. I exist to provide musicians with tools to express their creativity and inspire new ideas through the use of the products I make. My design philosophy is to create a simple, intuitive product with a musical quality rather an over-processed quality. Most of all I create circuits that I love and enjoy using. My hope is that you will love them too. If you have any questions about your pedal or want to share your thoughts and opinions, good or bad, feel free to shoot me an email at hungryrobotpedals@gmail.com

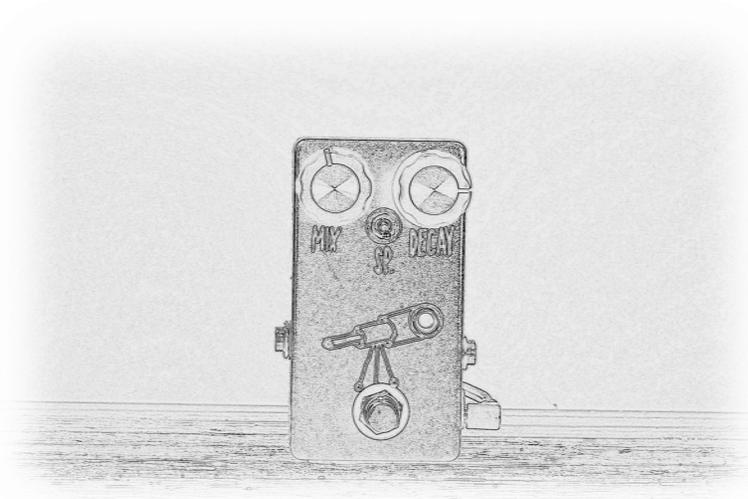

The Little Gazer [reverb]

The best term to describe the tone of the Stargazer is "musical." The Stargazer does not attempt to emulate a specific reverb type. The goal was to create a reverb that sounds organic and that sits well within a mix or recording. The Stargazer was created with ambience in mind. Not only does it handle traditional reverb sounds, it also is capable of creating a deep, self-oscillating wash.

Unique to The Stargazer is what I have coined the "SPARKLE" switch. I wanted to create a feature that would give the same effect as shimmer without the unnatural sounding pitch shifting. The "SPARKLE" switch adds a sparkly overtone to the wet reverb signal to give it a "shimmery" quality without sounding digitized and processed.

CONTROLS

Mix - Controls the volume of the wet reverb signal that is added to the dry signal. The dry signal is untouched and remains at unity on all settings

Sparkle - Adds an ethereal, "shimmery" quality to the reverb without a pitch shifting octave. With the sparkle switch off, the reverb sounds more traditional and "hall-esque."

Decay - Controls how long the reverb signal "dwells." Control is calibrated in the shop to self-oscillate. See "usage tips" to see how to easily adjust the calibration.

USAGE TIPS

The Little Gazer is a very simple to use pedal, so there is not a ton to be said. Your playing style will be the determining factor for how you set your pedal. If you have a fast playing style, or are playing rhythm, you will be best to keep the decay turned down. If you are going for a spacey, ambient sound, turn the mix and decay up.

The Sparkle switch is where a lot of the pedals unique character comes from. The Sparkle switch does not shift your pitch like many reverbs. It accomplishes much the same purpose and feel of an octave shimmer, but in a more natural, ear-pleasing manner. If you want your reverb a little less present, turn the Sparkle switch off.

The Little Gazer does self-oscillate and ramp in higher decay settings. This is by design. You will have to find the sweet spot for your personal taste and rig.

The decay knob does have an internal calibration. I realize that everyone has their own personal taste when it comes to decay. There is a small blue and white trimpot inside that will adjust the maximum decay.

POWER REQUIREMENTS

Power must meet the following minimum requirements. For best results use a power supply that is specifically designed for pedals

9V DC

**2.1mm "Boss" Style Plug
Negative Center**



WARRANTY INFORMATION

Hungry Robot Pedals provides a lifetime warranty on all of its products.

The warranty covers any issues with the internal wiring or circuitry as well as any damaged or defective parts whose failure was not the result of misuse and abuse.

Any modification to your pedal or use of improper power will result in a voided warranty and result in a repair charge.