

## Connections Guide

 
### 1 Aerial Connections

- Connect the cable from the satellite dish to LNB IN.




### 2 Digital A/V Output Connections

- Connect the HDMI Cable to the HDMI Connector of your TV.
- Connect SPDIF to Digital audio input of the equipment (Digital Audio)

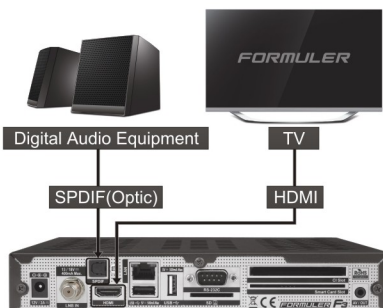

### 3 Composite Video Connections

 - Connect the RCA to the RCA input of your TV.

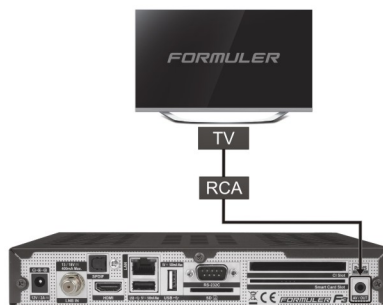


## Troubleshooting

| Problem   | Solution   |
|---|--|
| <b>No or Bad Signal</b>                                 | <p><b>For Satellite tuner module</b></p> <ul style="list-style-type: none"> <li>• Check the LNB ; Replace the LNB if necessary.</li> <li>• Check the cable from the LNB.</li> <li>• Check the position of the dish; realign dish if necessary.</li> <li>• If you are using a DiSEqC 1.0 switch, check that you have connected and programmed the LNBs to the correct connections on the switch.</li> </ul> <p><b>Common features for all types of DVB receivers</b></p> <ul style="list-style-type: none"> <li>• Check the 'Signal Level' and the 'Signal Quality'.</li> </ul>                     |
| <b>Poor picture quality</b>                             | <ul style="list-style-type: none"> <li>• See '<b>No Picture</b>' above.</li> <li>• Check the signal level, if this is low then tries adjusting the alignment of your dish.</li> </ul>  |
| <b>No Picture</b>                                       | <ul style="list-style-type: none"> <li>• See '<b>Does not display any message on the front panel</b>' above.</li> <li>• To match the STB system with your TV system (PAL/NTSC), press VFormat button until a picture is displayed.</li> <li>• Check the video output port is firmly connected to the TV or VCR.</li> <li>• Check that you have selected the Video Input on your TV.</li> <li>• Check the brightness level of the TV.</li> <li>• Check the resolution that your TV supports, and set the proper resolution with the remote <i>Resolution</i> button to obtain a picture.</li> </ul> |
| <b>Does not display any message on the front panel.</b> | <ul style="list-style-type: none"> <li>• Check the main power cable and check that it is plugged into a suitable power outlet.</li> </ul>  |
| <b>No Sound</b>   | <ul style="list-style-type: none"> <li>• See '<b>No Picture</b>' above.</li> <li>• Check the volume level of the TV and STB.</li> <li>• Check the Mute status of the TV and STB.</li> </ul>  |
| <b>Remote Control does not operate</b>                  | <ul style="list-style-type: none"> <li>• Point remote control directly towards the STB.</li> <li>• Check that the STB button lights up when you press any button.</li> <li>• Check and replace batteries.</li> </ul>   |

## Included Accessories


 
### Separately purchased Accessories

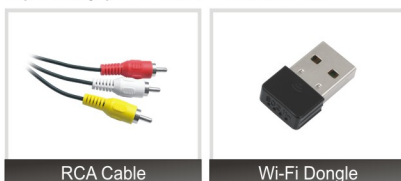

\* Note : Please visit [www.formuler.tv](http://www.formuler.tv) for more information.