




Back of the Kite

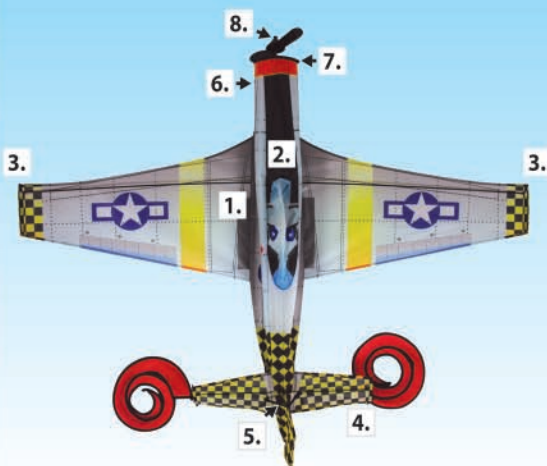


1. Insert Main Wing Spreader through the Hole.

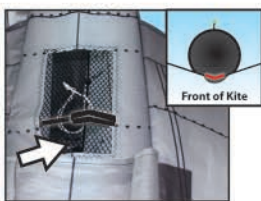

2. Insert Main Wing Spreader into T-Connector. Make sure Wings are bent back.

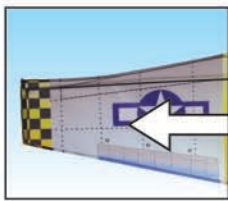

3. Insert Main Wing Spreader into Connectors. (Repeat Steps 1 & 2 for other side).

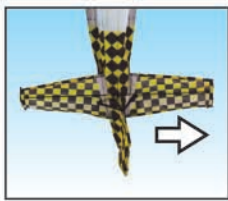

4. Insert Tail Wing Spreader all the way through hole and insert into Connectors left and right.



5. Locate Vertical Tail Strut and insert end into Connector at the bottom.



6. At front, insert Vertical Strut into Top Connector.



7. Insert Propeller Spreader into Side Connector.



8. Remove Ring & put Propeller on. Put Ring back to secure Propeller.

9. Attach the QuikClip® to Bridle Loop. Top Loop for light to medium winds, Bottom Loop for strong winds.

