

# TEMPLATE ASSEMBLY

(rc Model Airplane Construction Plans)

**MESA rcFoam Fighters**

**MF-Typhoon Template**

(Design by Ashton Lyon)

(CAD Drawing by Ashton Lyon)



## INSTRUCTIONS (Choose Print Scale to "NONE")


PRINT TEMPLATE SHEETS. CUT AND ASSEMBLE.

See our YouTube Channel for the MF-Typhoon Build Video

**5" Check Line**



Check Distance to Insure Correct Scaling.

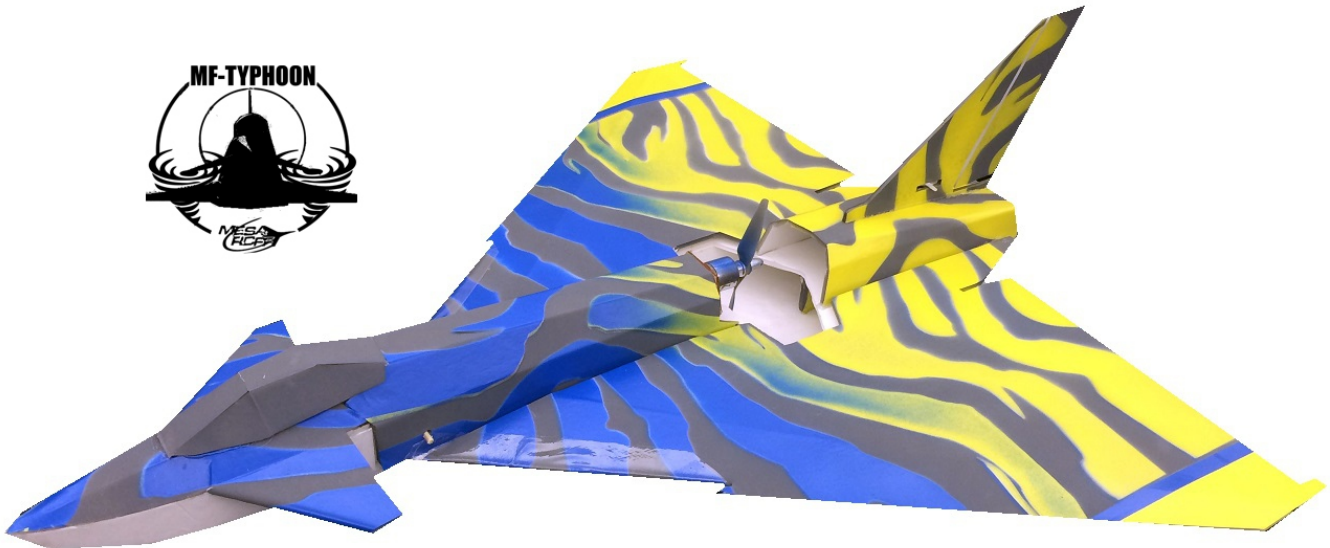

# MESA rcFo

# MF- Typho

*(Design by Ashton Lyon)*


*(CAD Drawing by Ashtc)*

*(Template Rev 1.5 - Cop)*


1 2 3 4






1 2 3 4 5 6 7 8 9 10

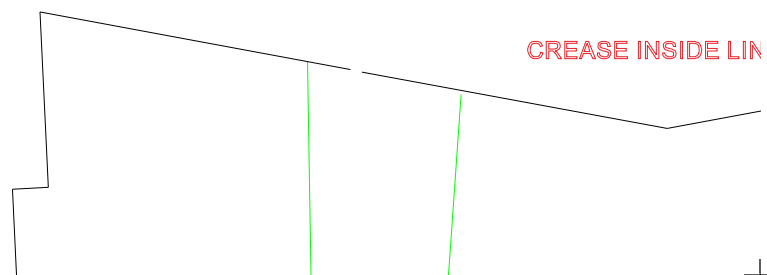


# Sam Fighters Don Template

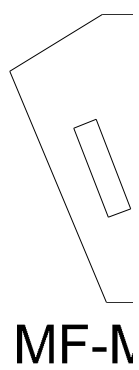


)  
(in Lyon)  
© MESA rcFoam Fighters

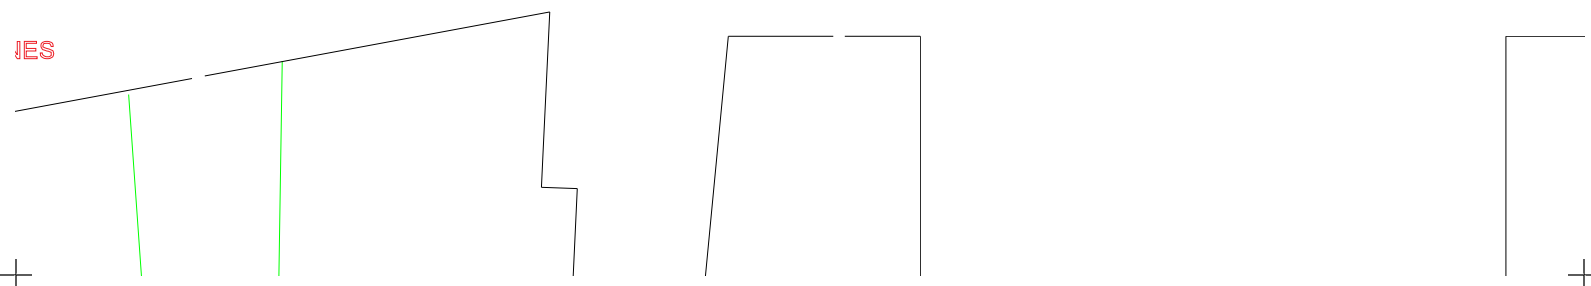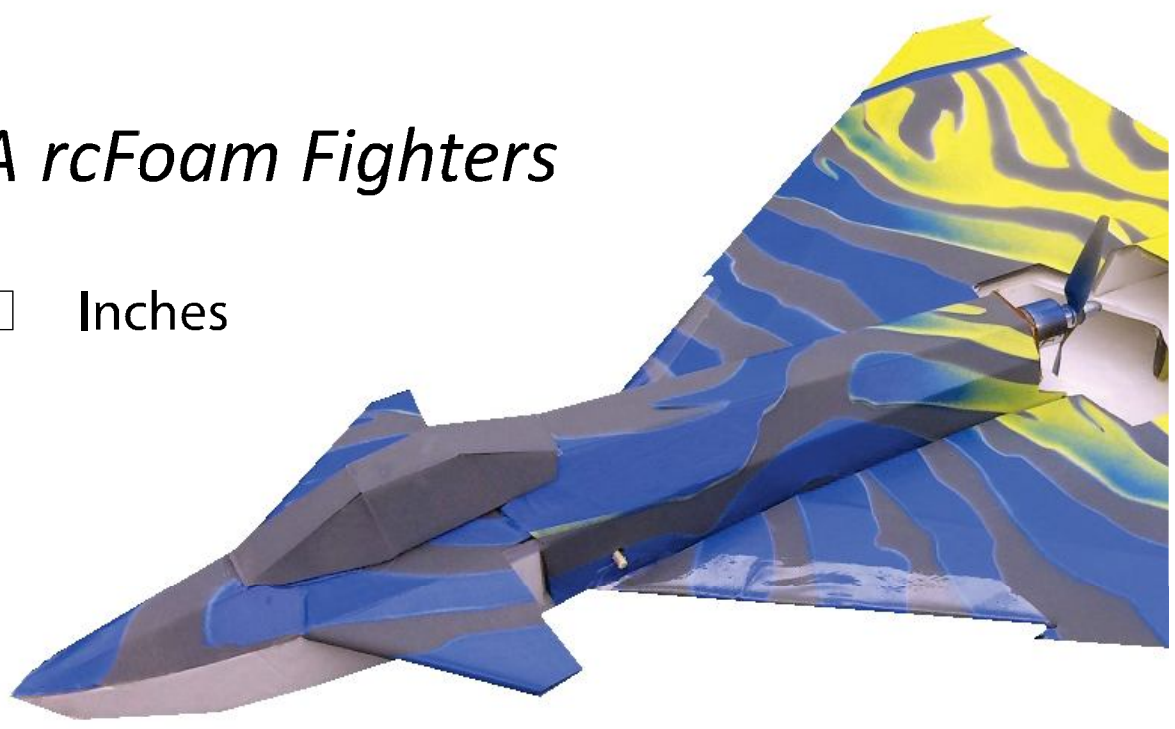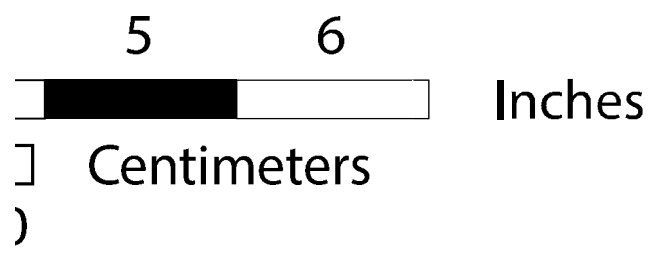

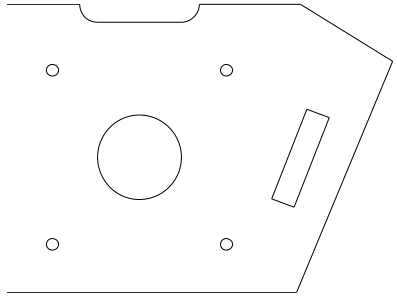

MOTOR MOUNT



Normal Cut \_\_\_\_\_





Bevel Cut \_\_\_\_\_

Lightly Crease \_\_\_\_\_

Remove \_\_\_\_\_





NOSE CONE SPACER

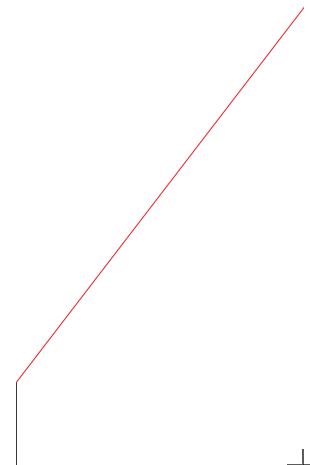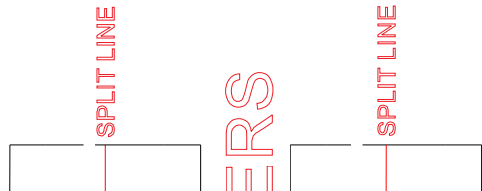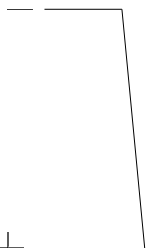
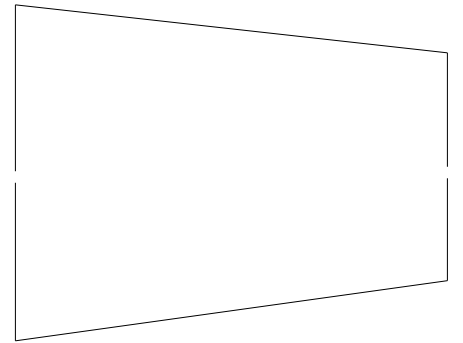



FRONT MID SECTION

BEVEL EDGE






BEVEL EDGE

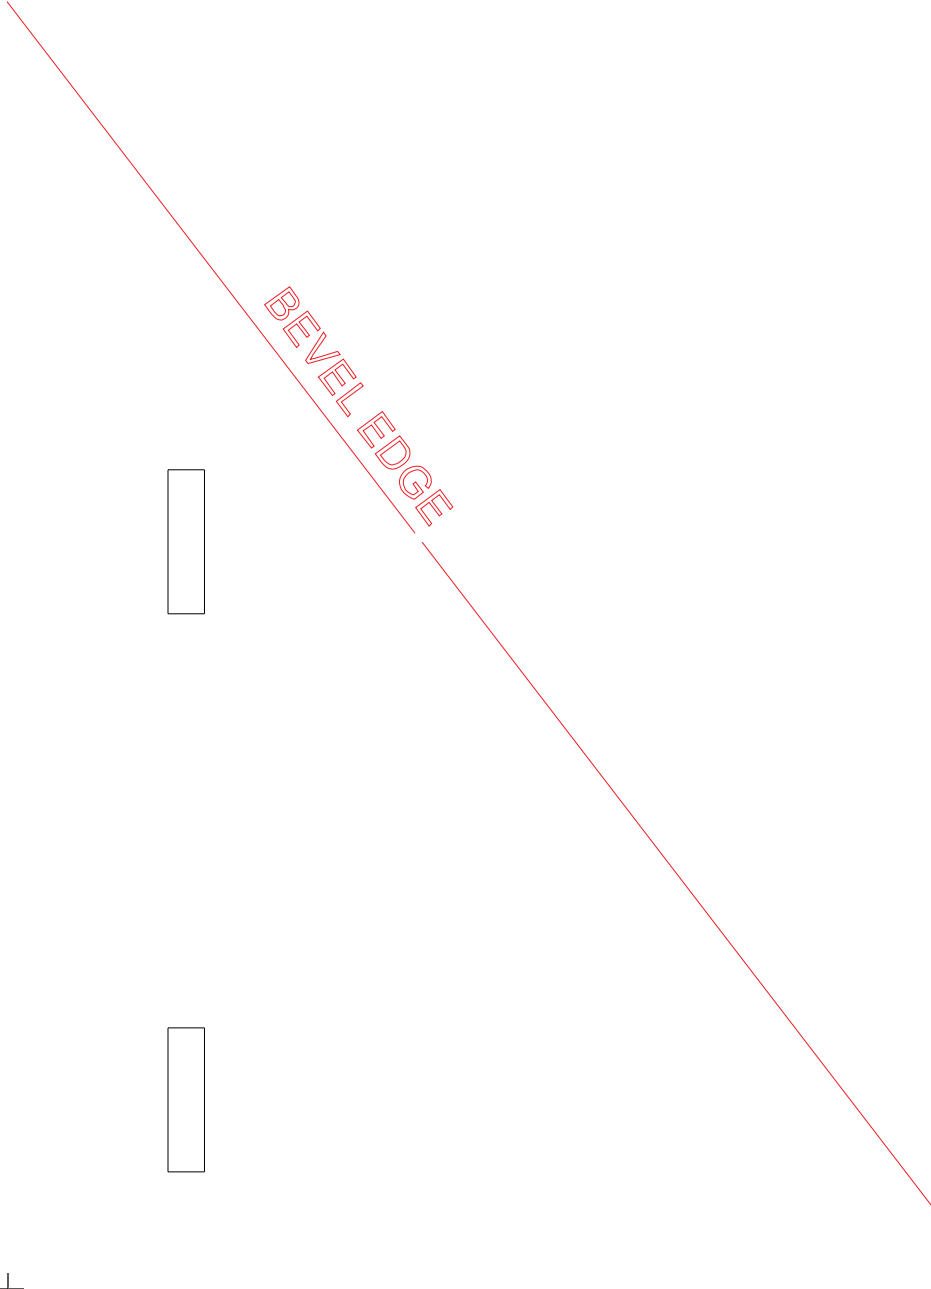


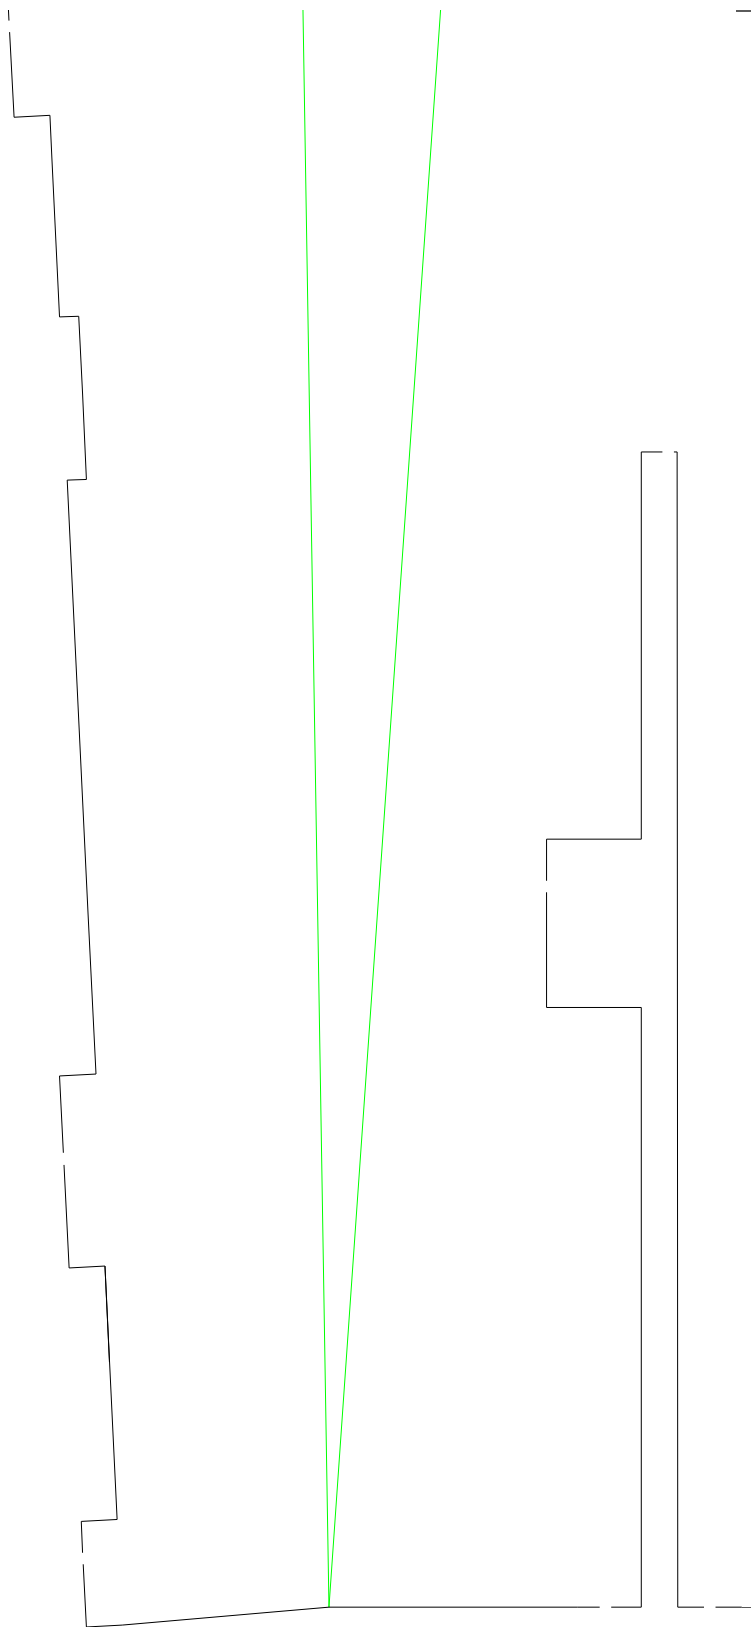


TOP BACK FUSEL

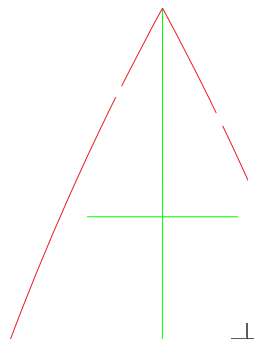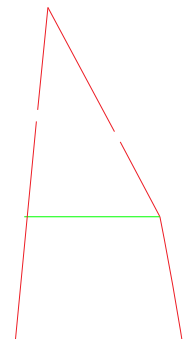


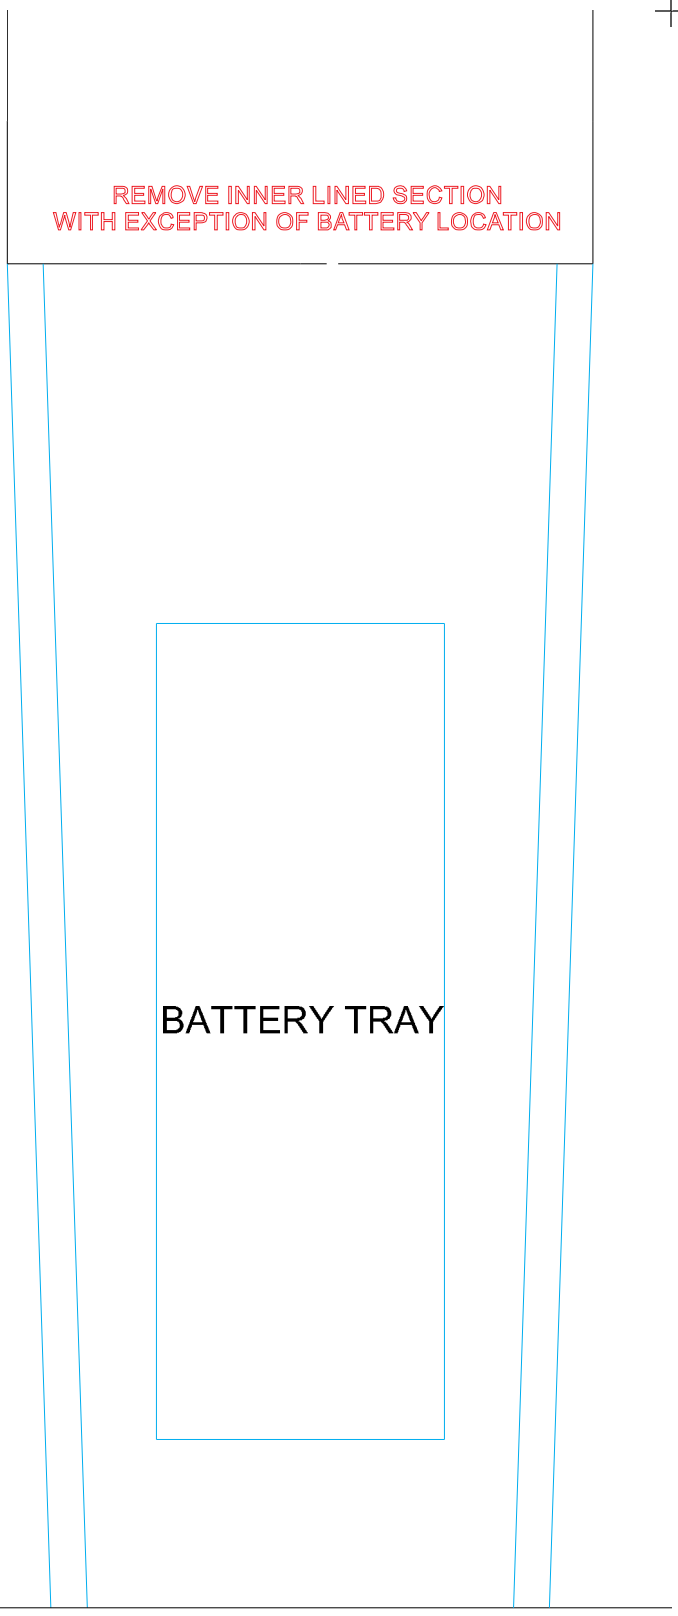



AGE PIECE

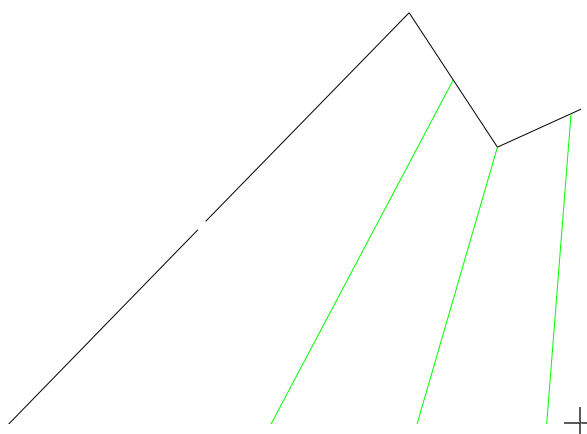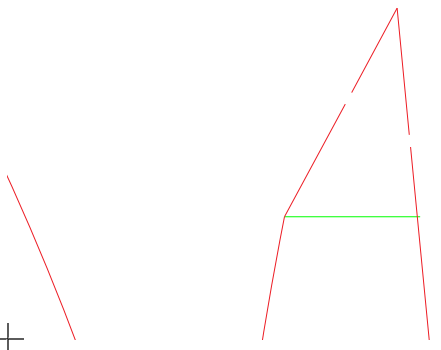




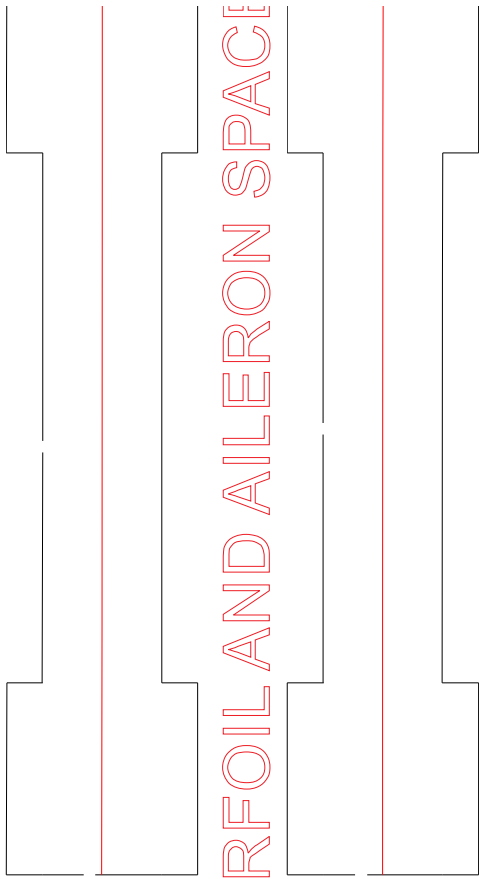





AIRFOIL AND AILERON SPACE

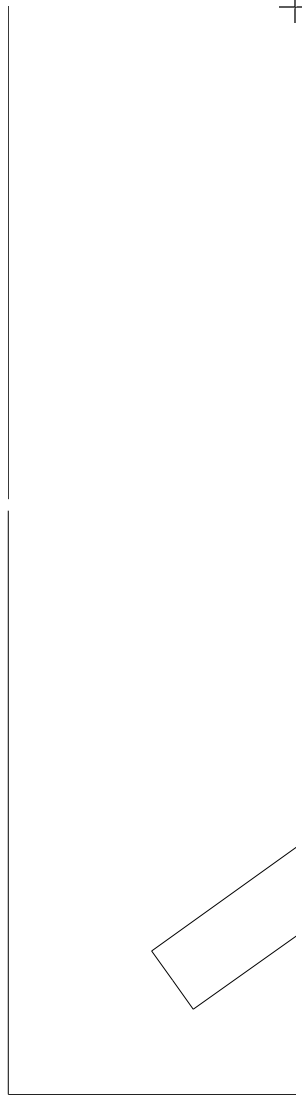


CREASE INSIDE LINES

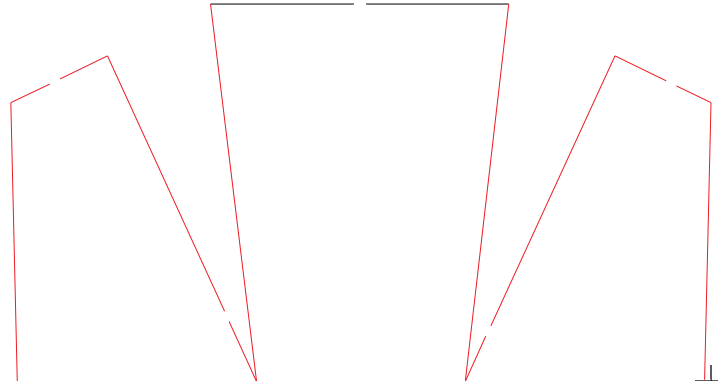


CG MARKS ○

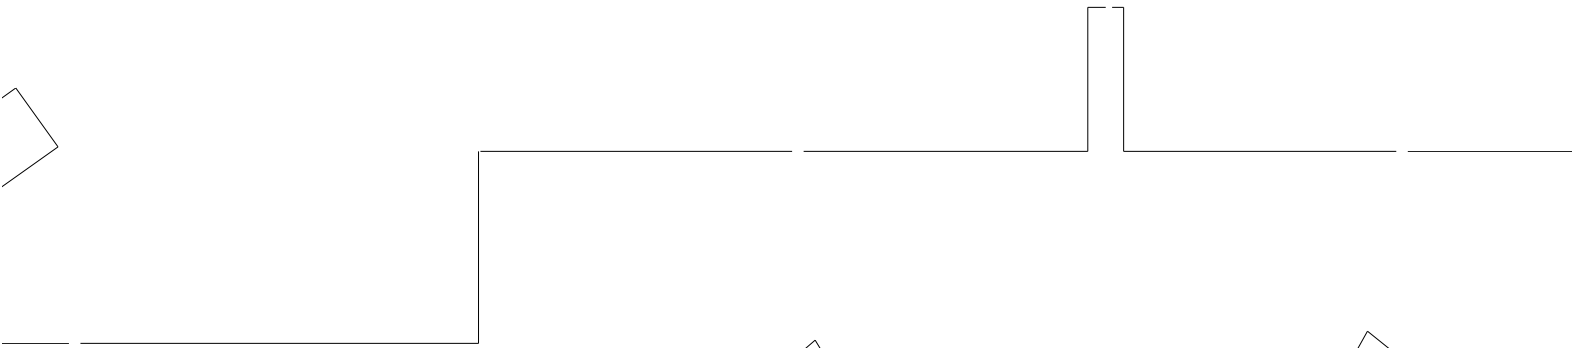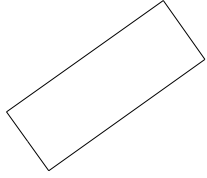





CREASE INSIDE LINES

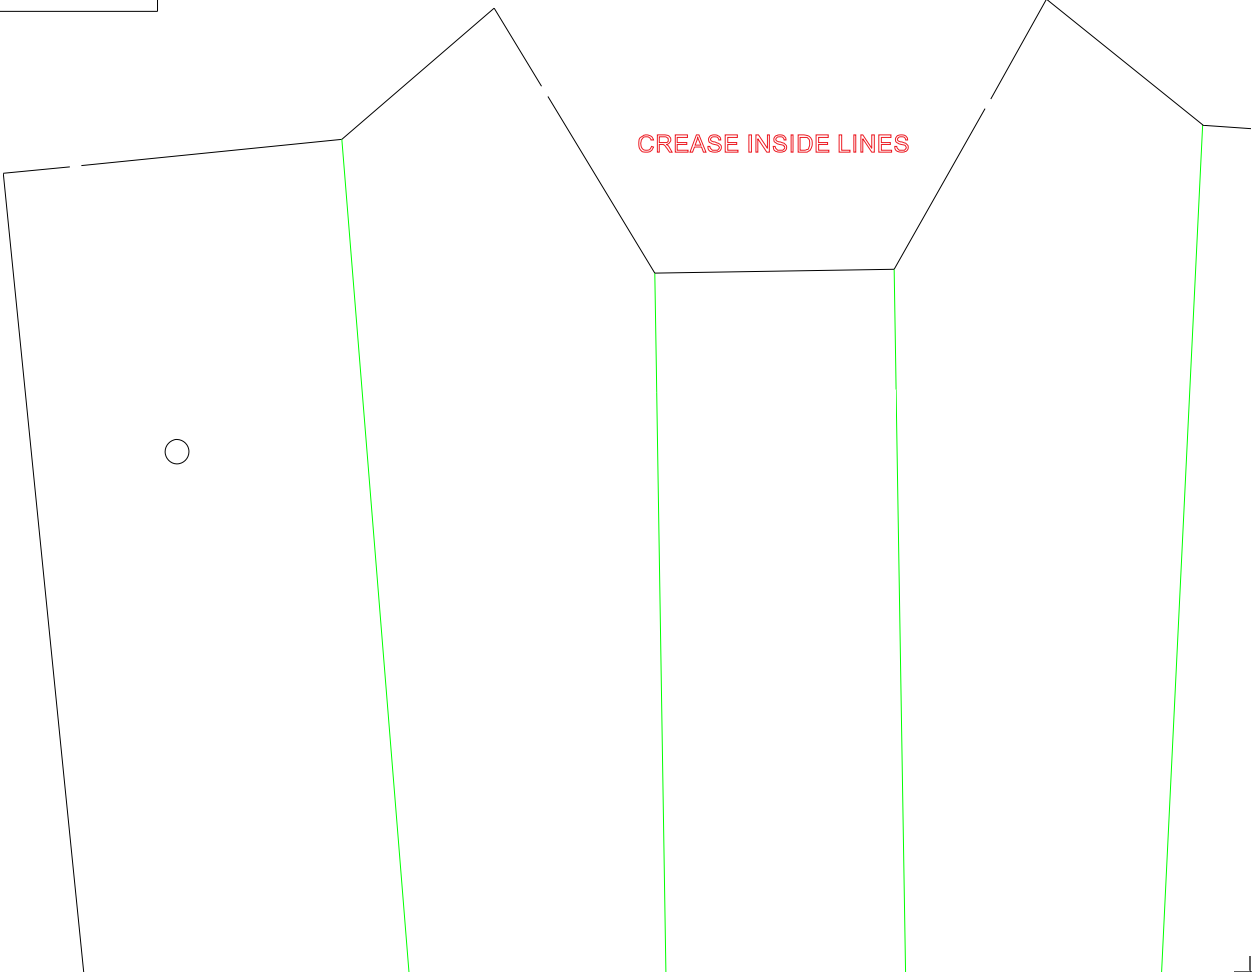


BEVEL



○ CG MARKS

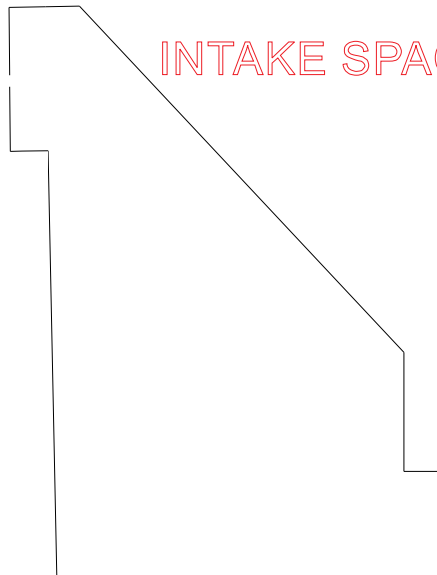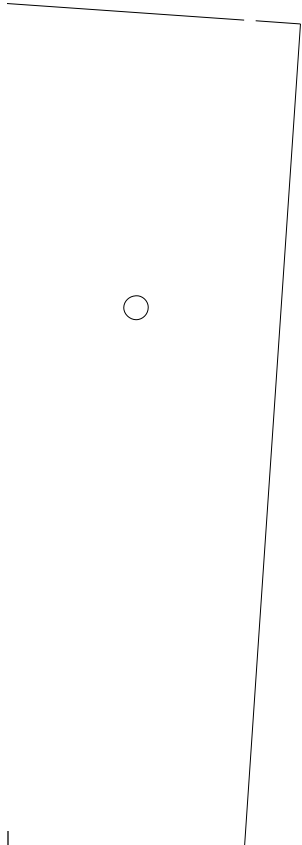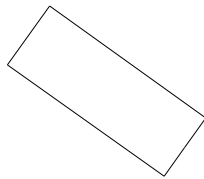
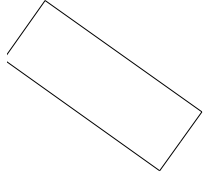


INTAKE SPACER

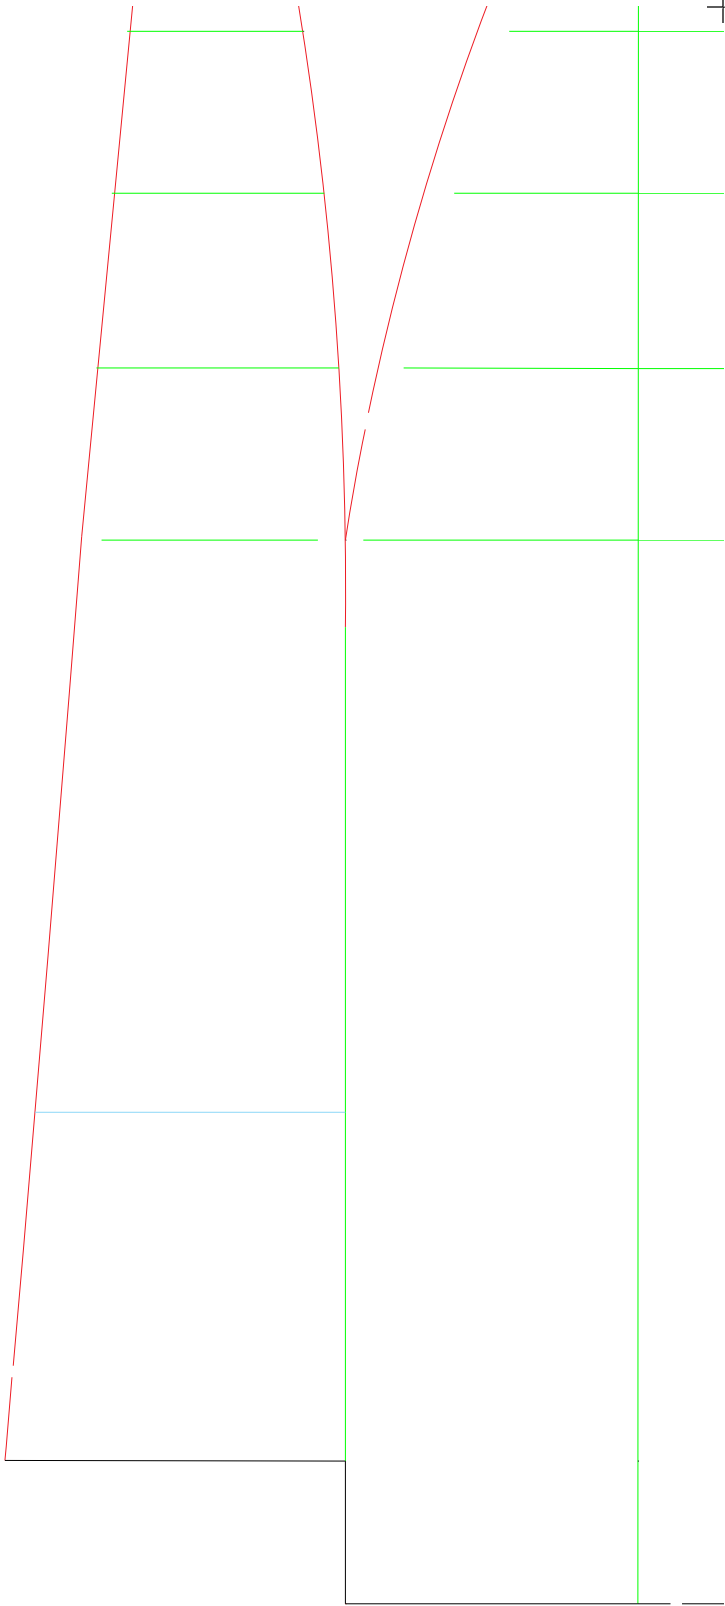

FRONT LOWER N


CREASE INSIDE LI

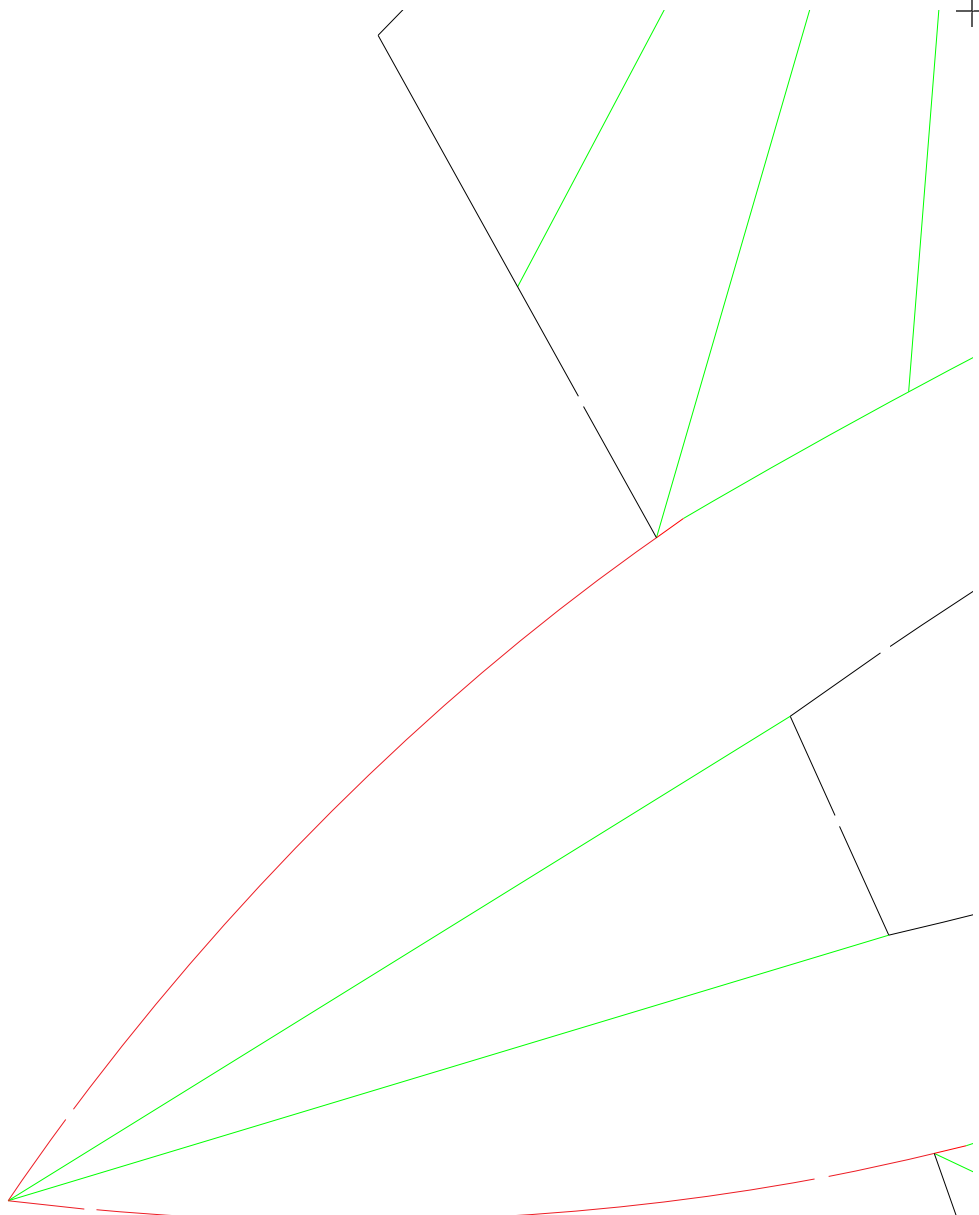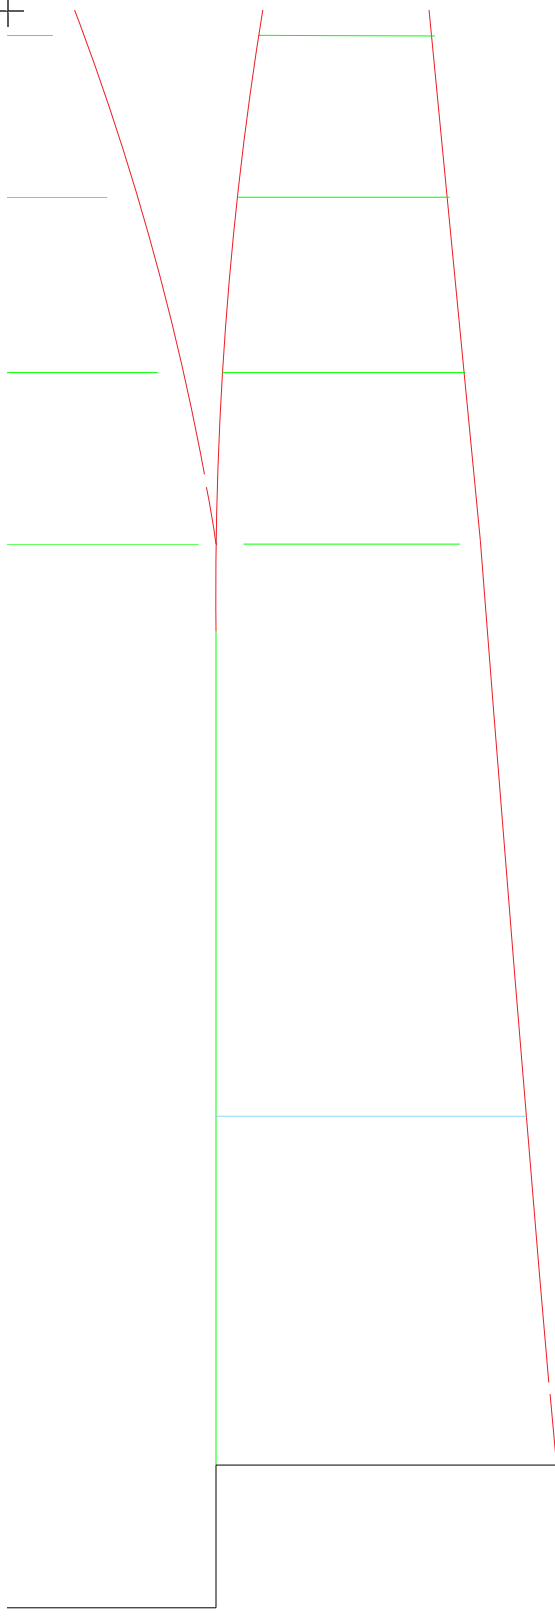



BEVEL CUT ON ALL LEADING EDGES  
WITH EXCEPTION OF CANARDS

# JOSE CONE

NES

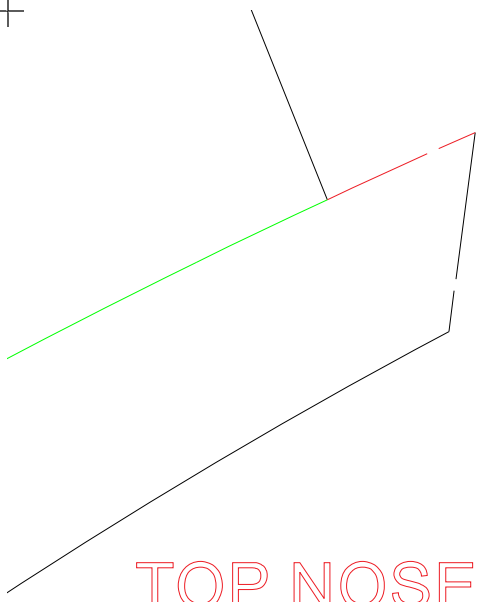


TOP NOSE  
CONE PIECE  
CREASE INSIDE LINES

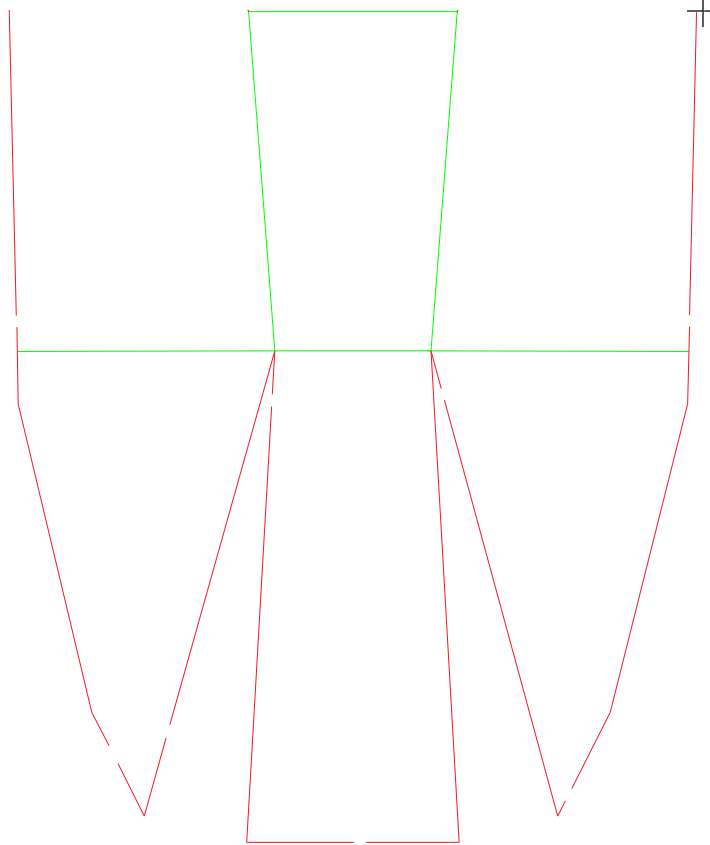
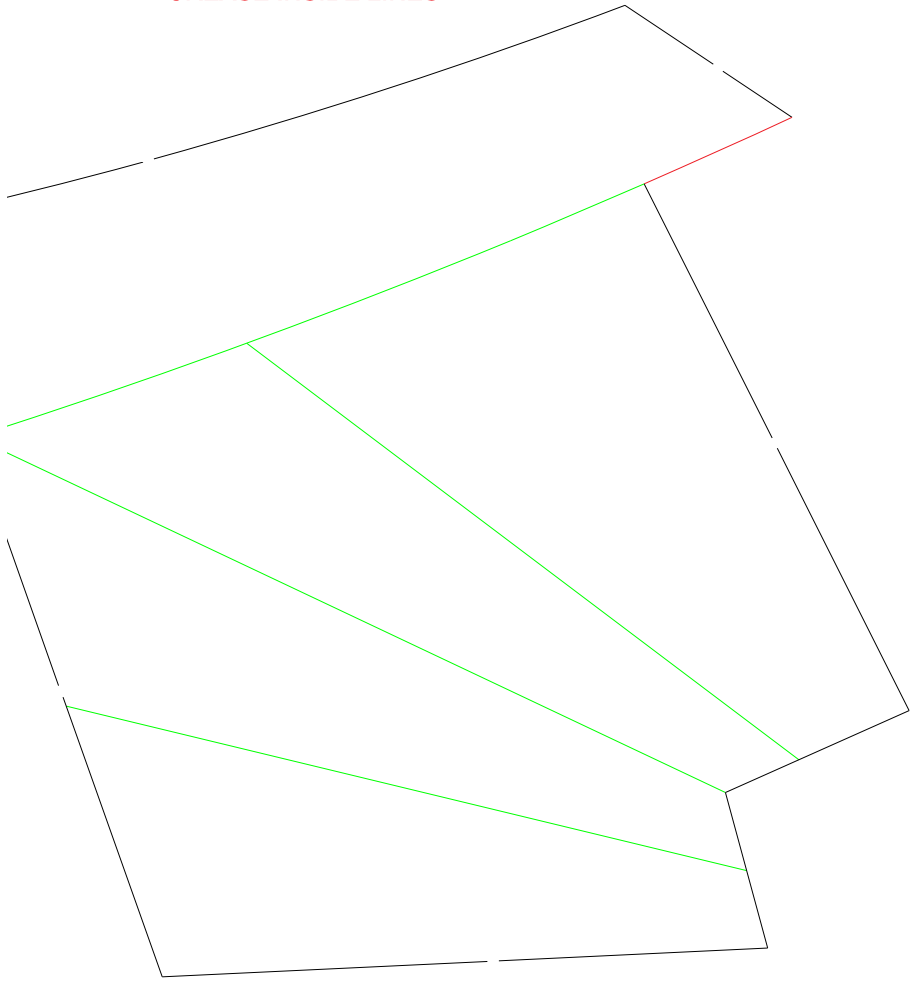


CANOPY

ALL EDGES

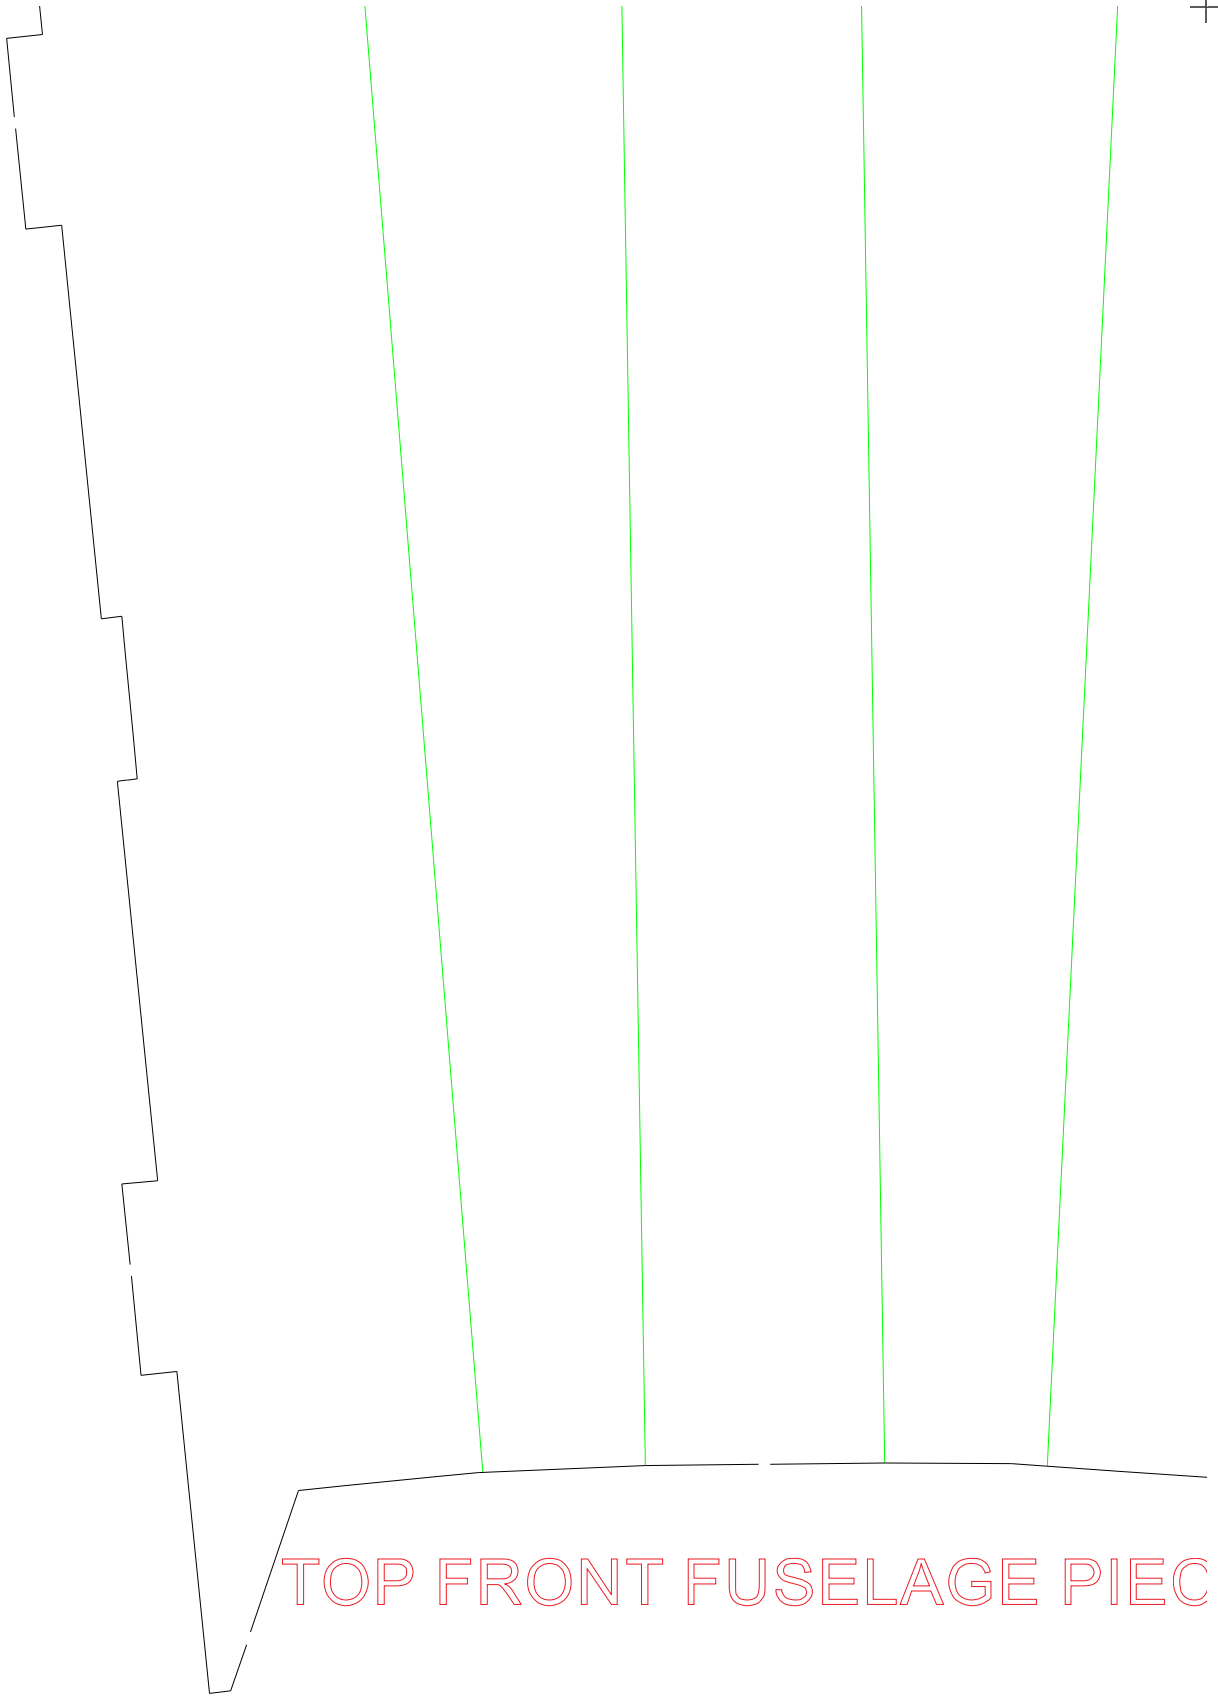

TOP FRONT FUSELAGE PIEC

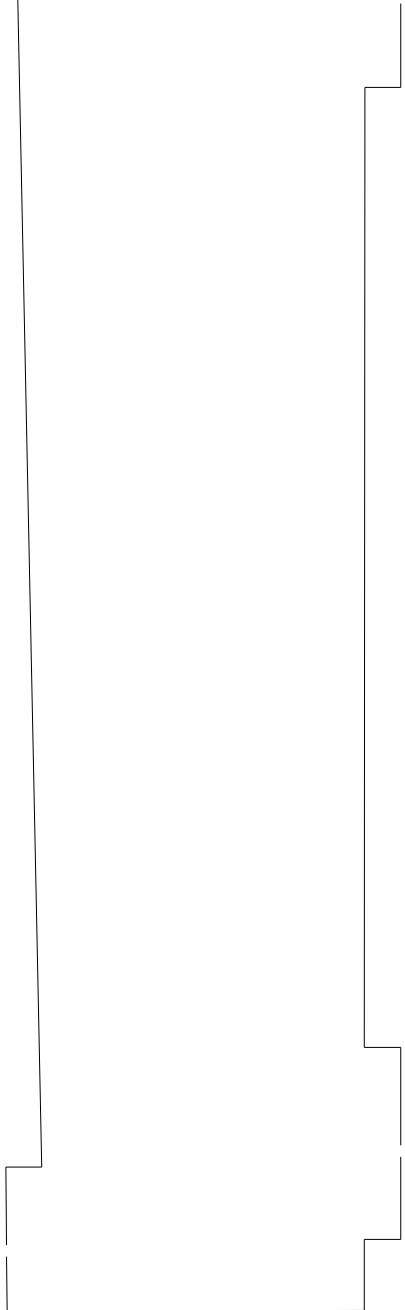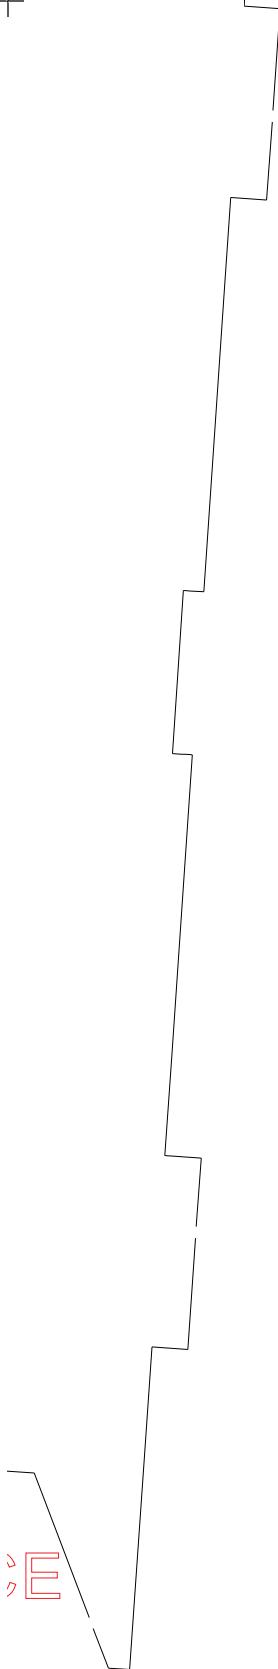



E




[www.mesarcfoamfighters.com](http://www.mesarcfoamfighters.com)




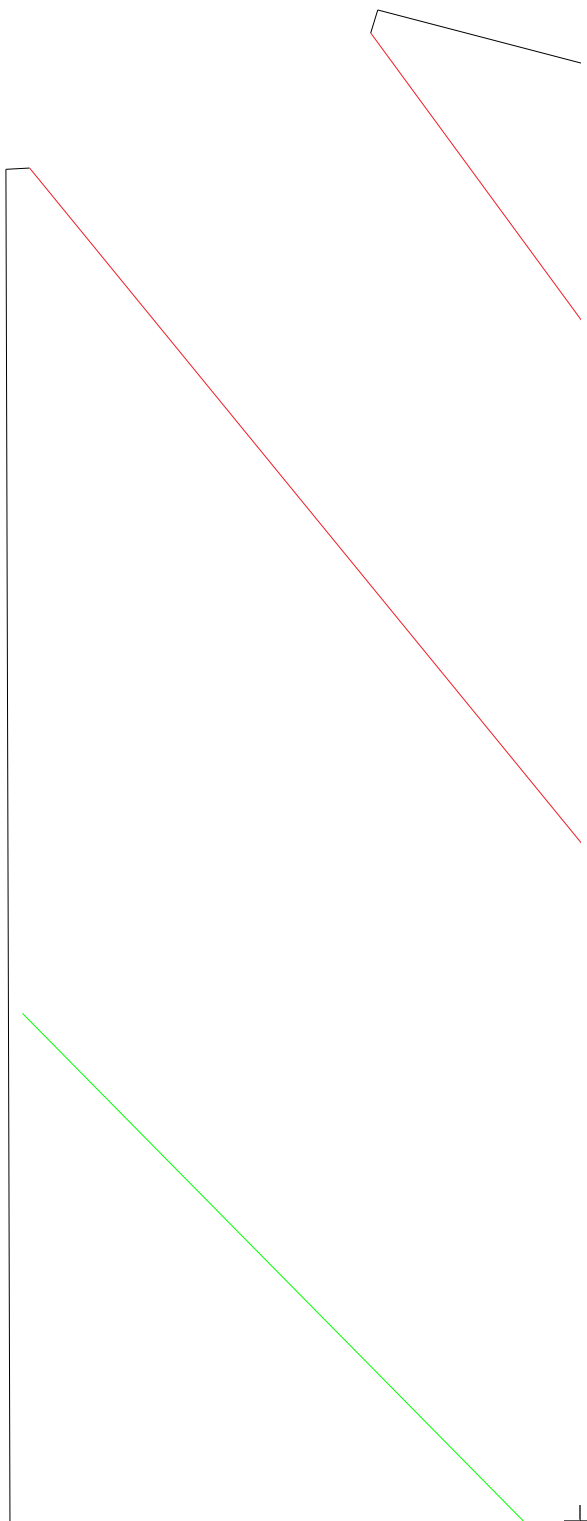

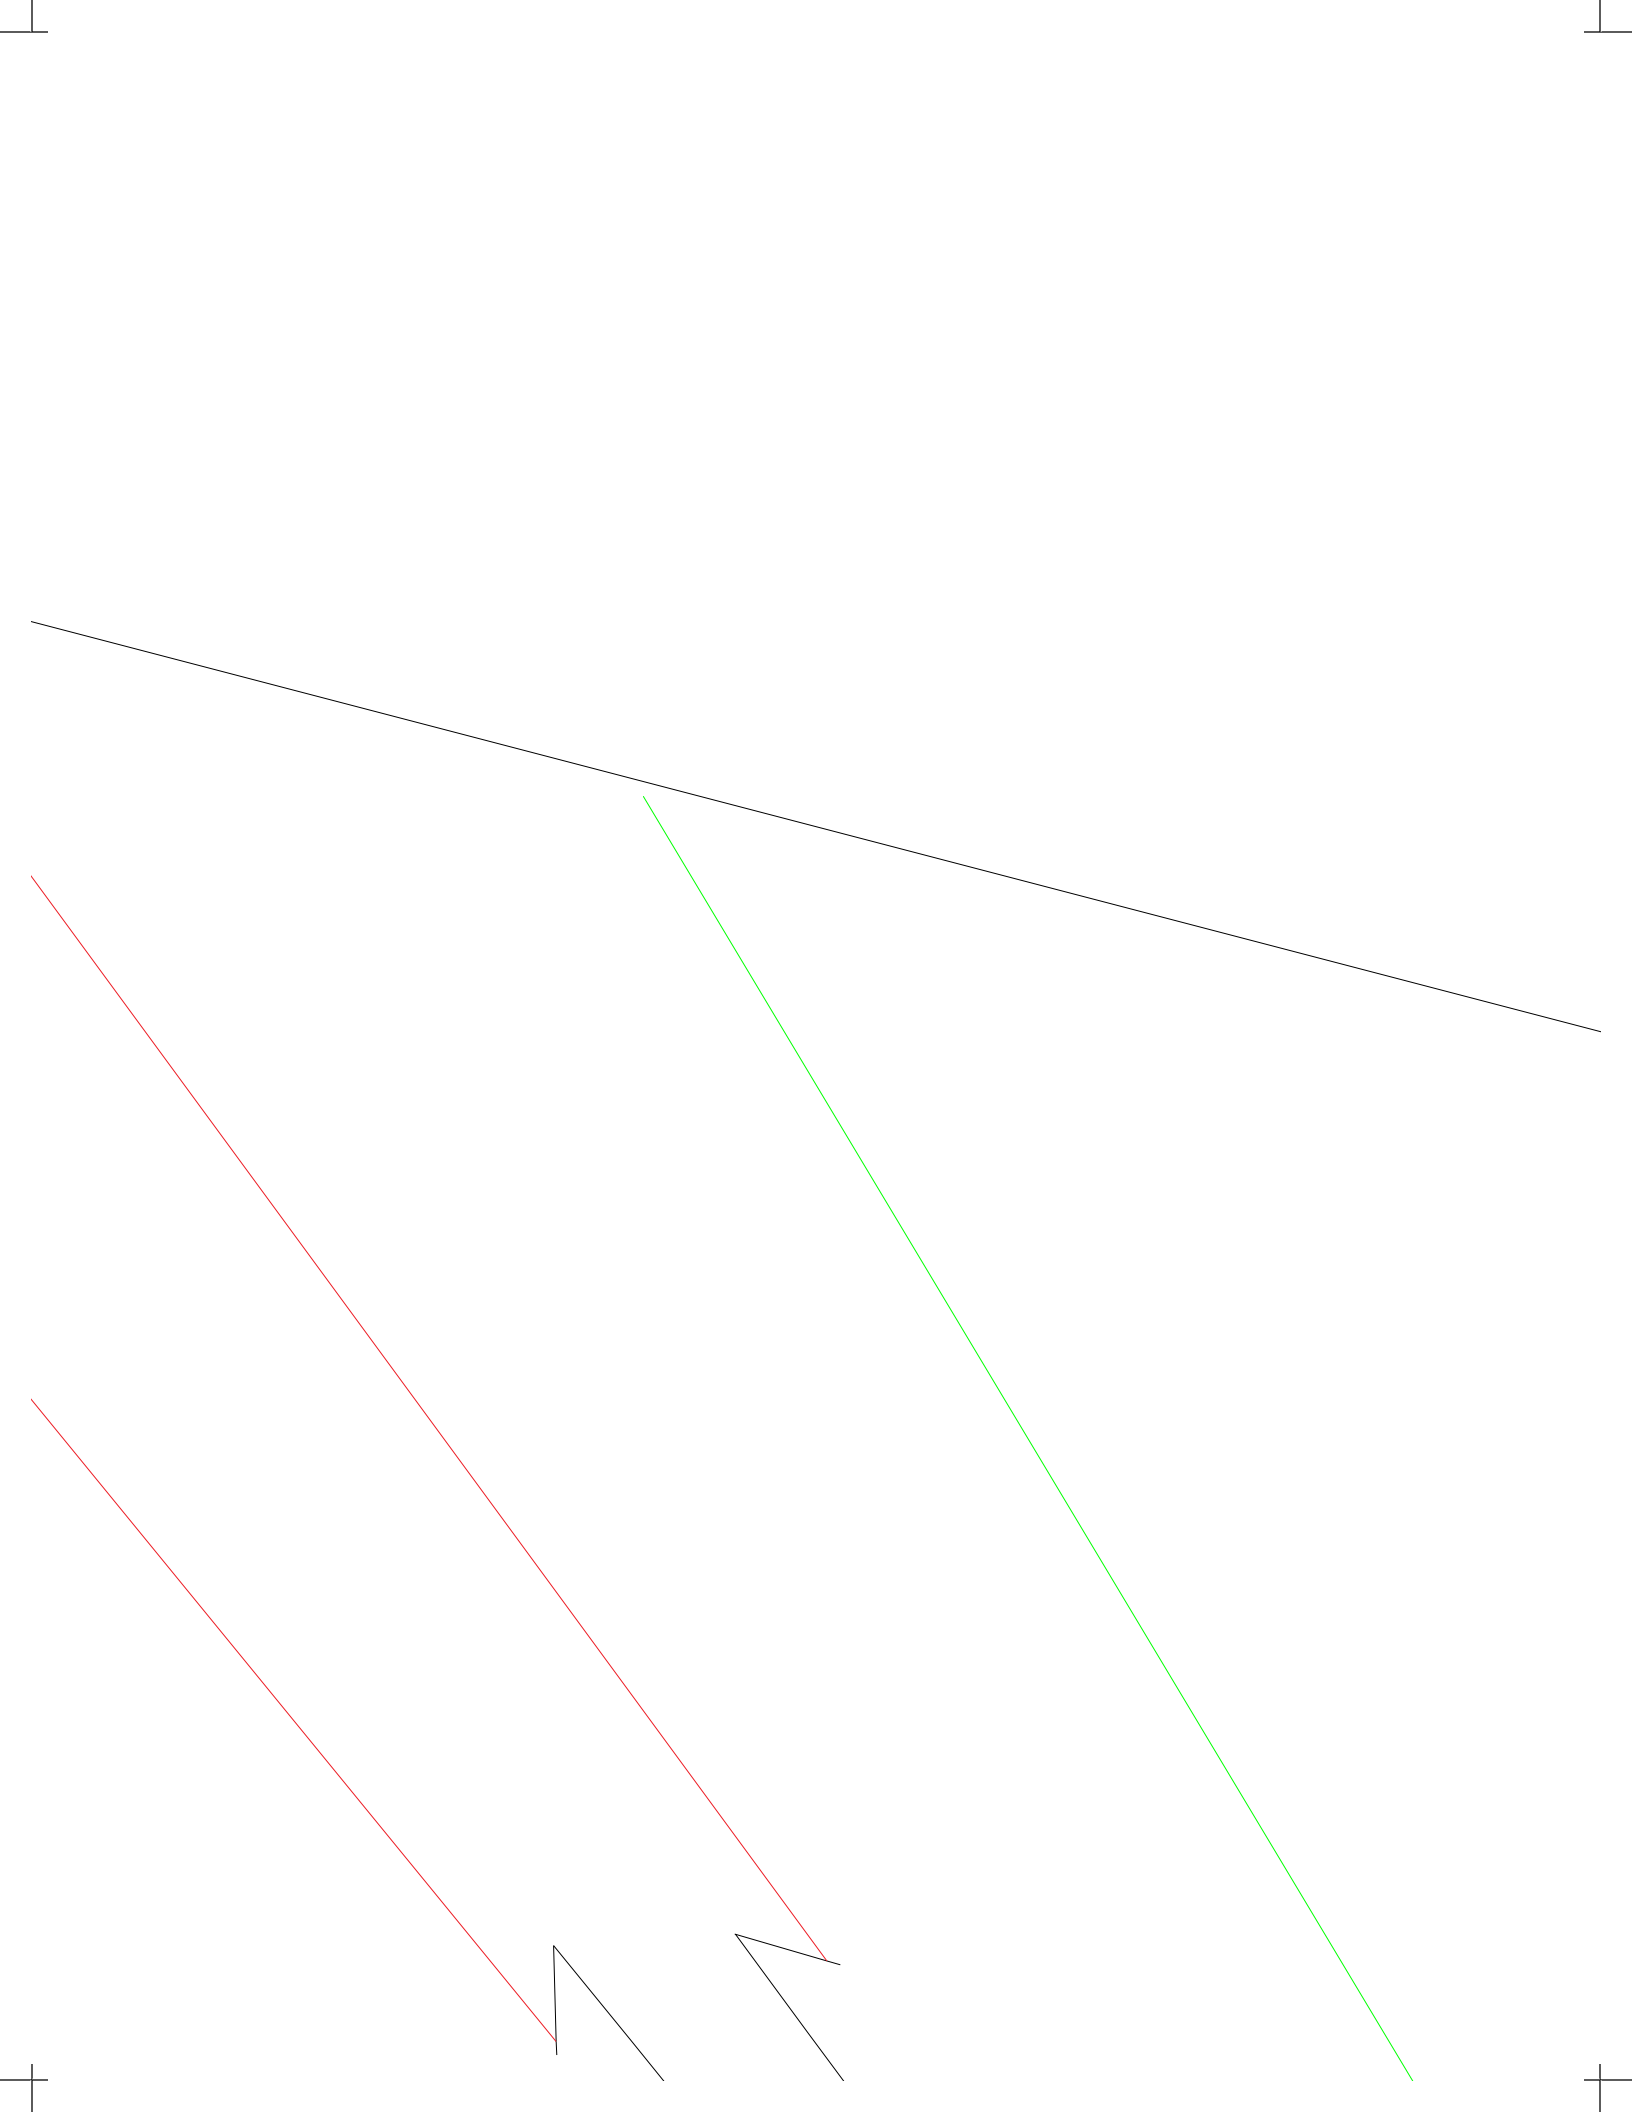


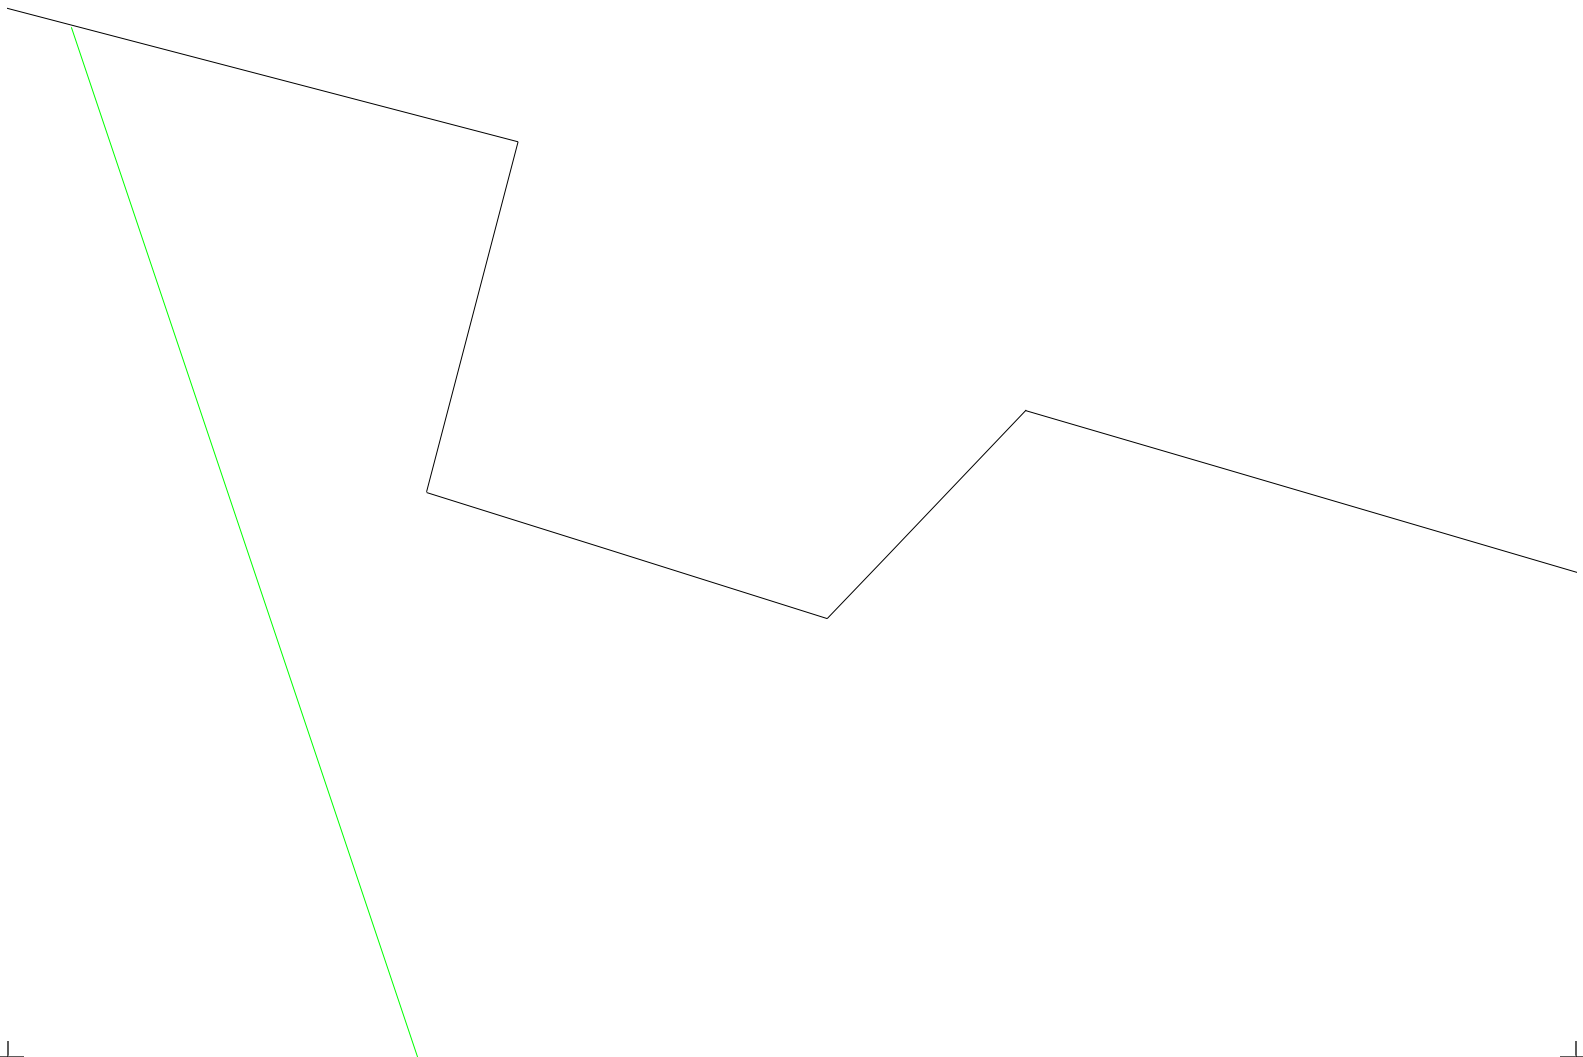



VER

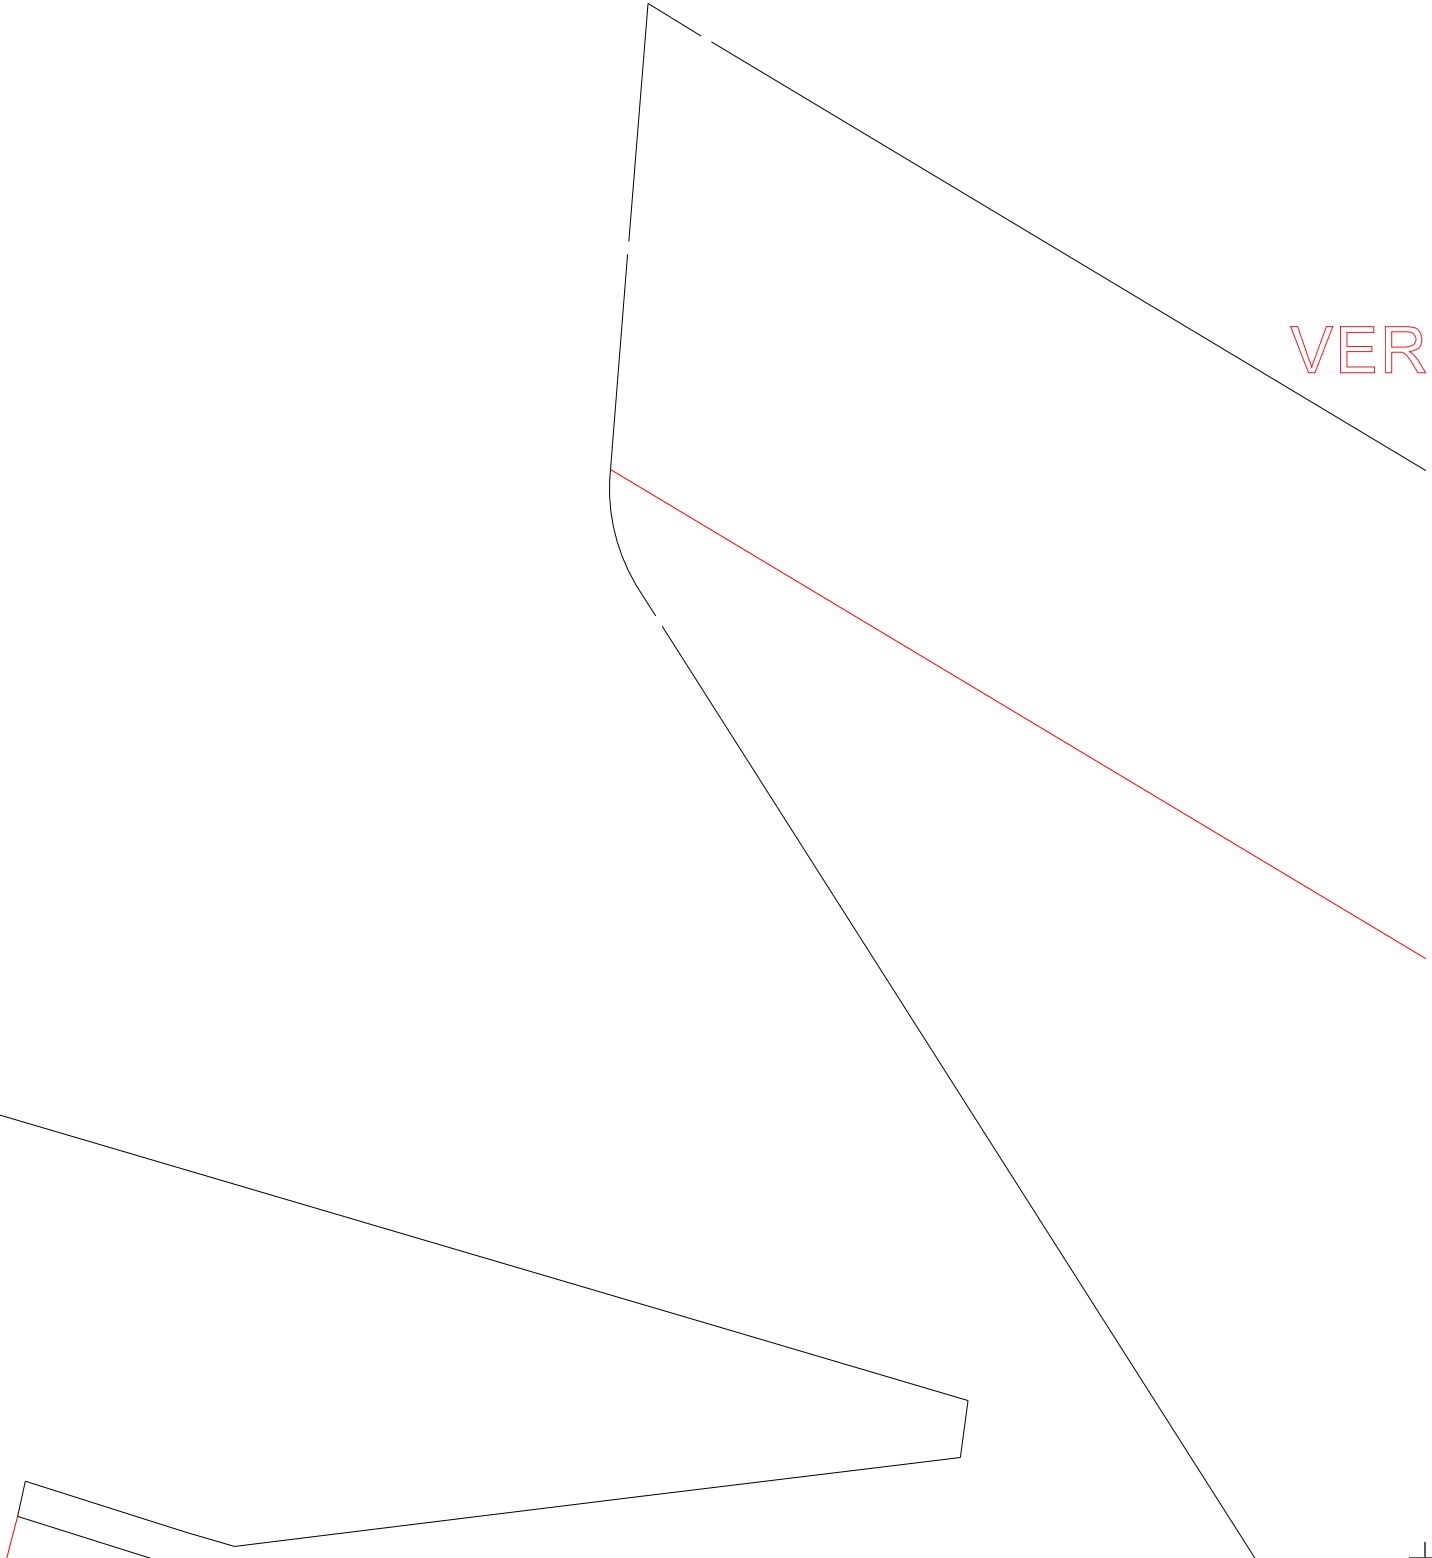


# OPTICAL STABILIZER

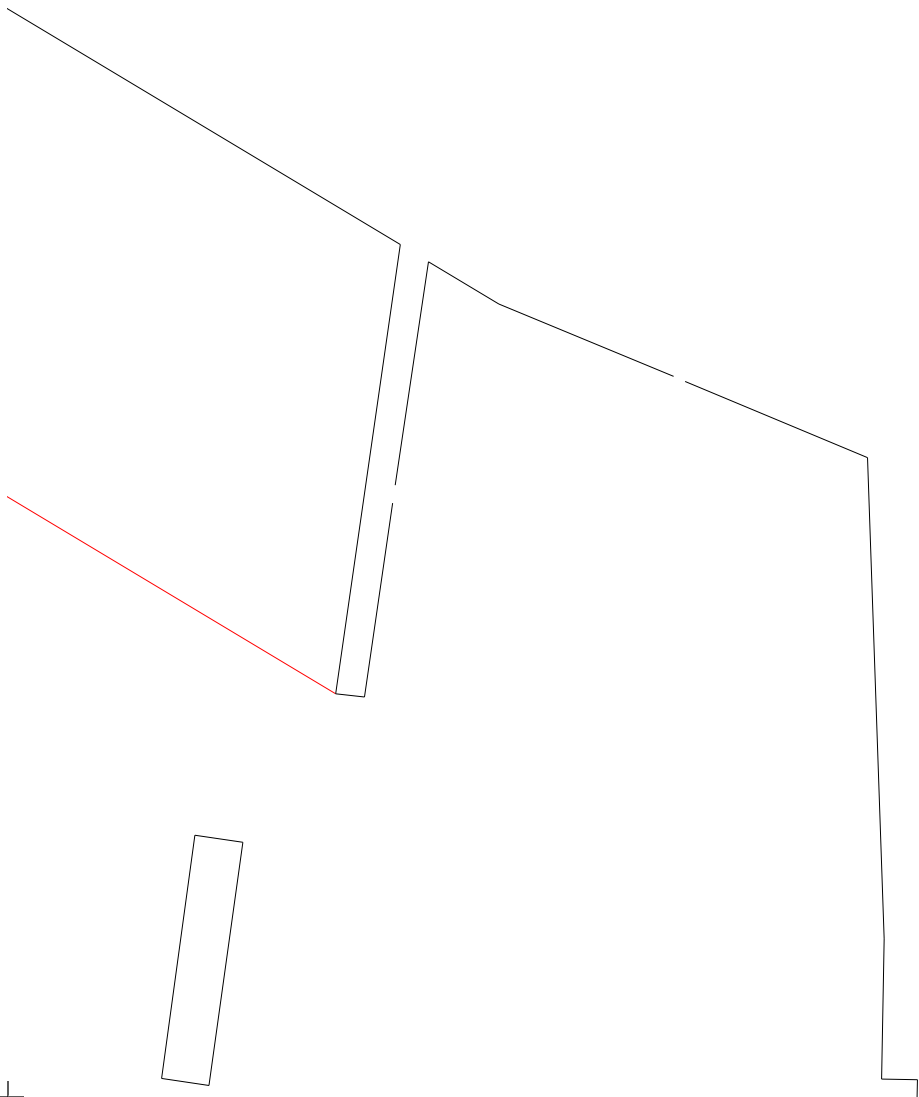


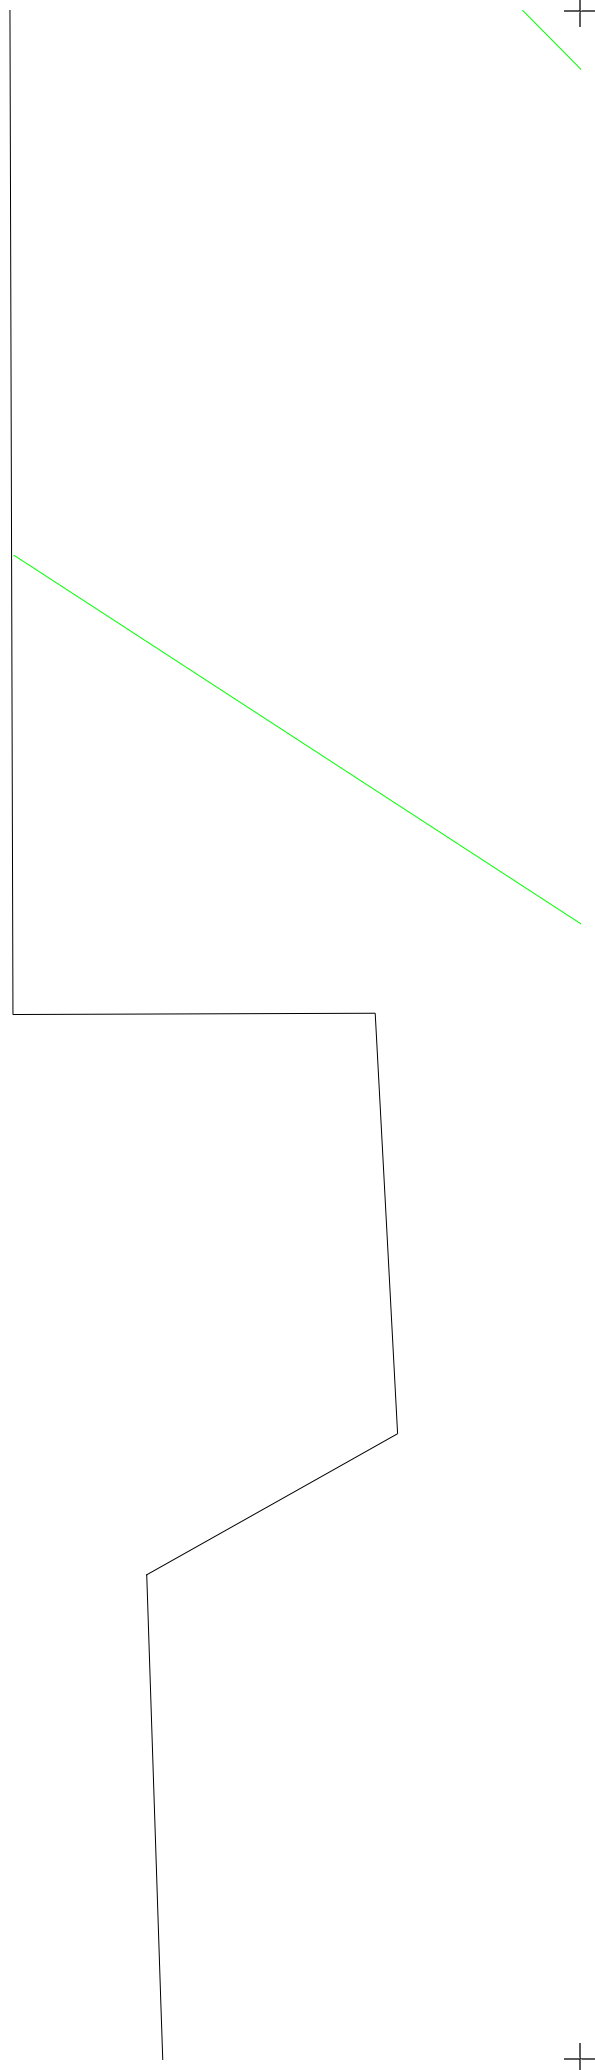


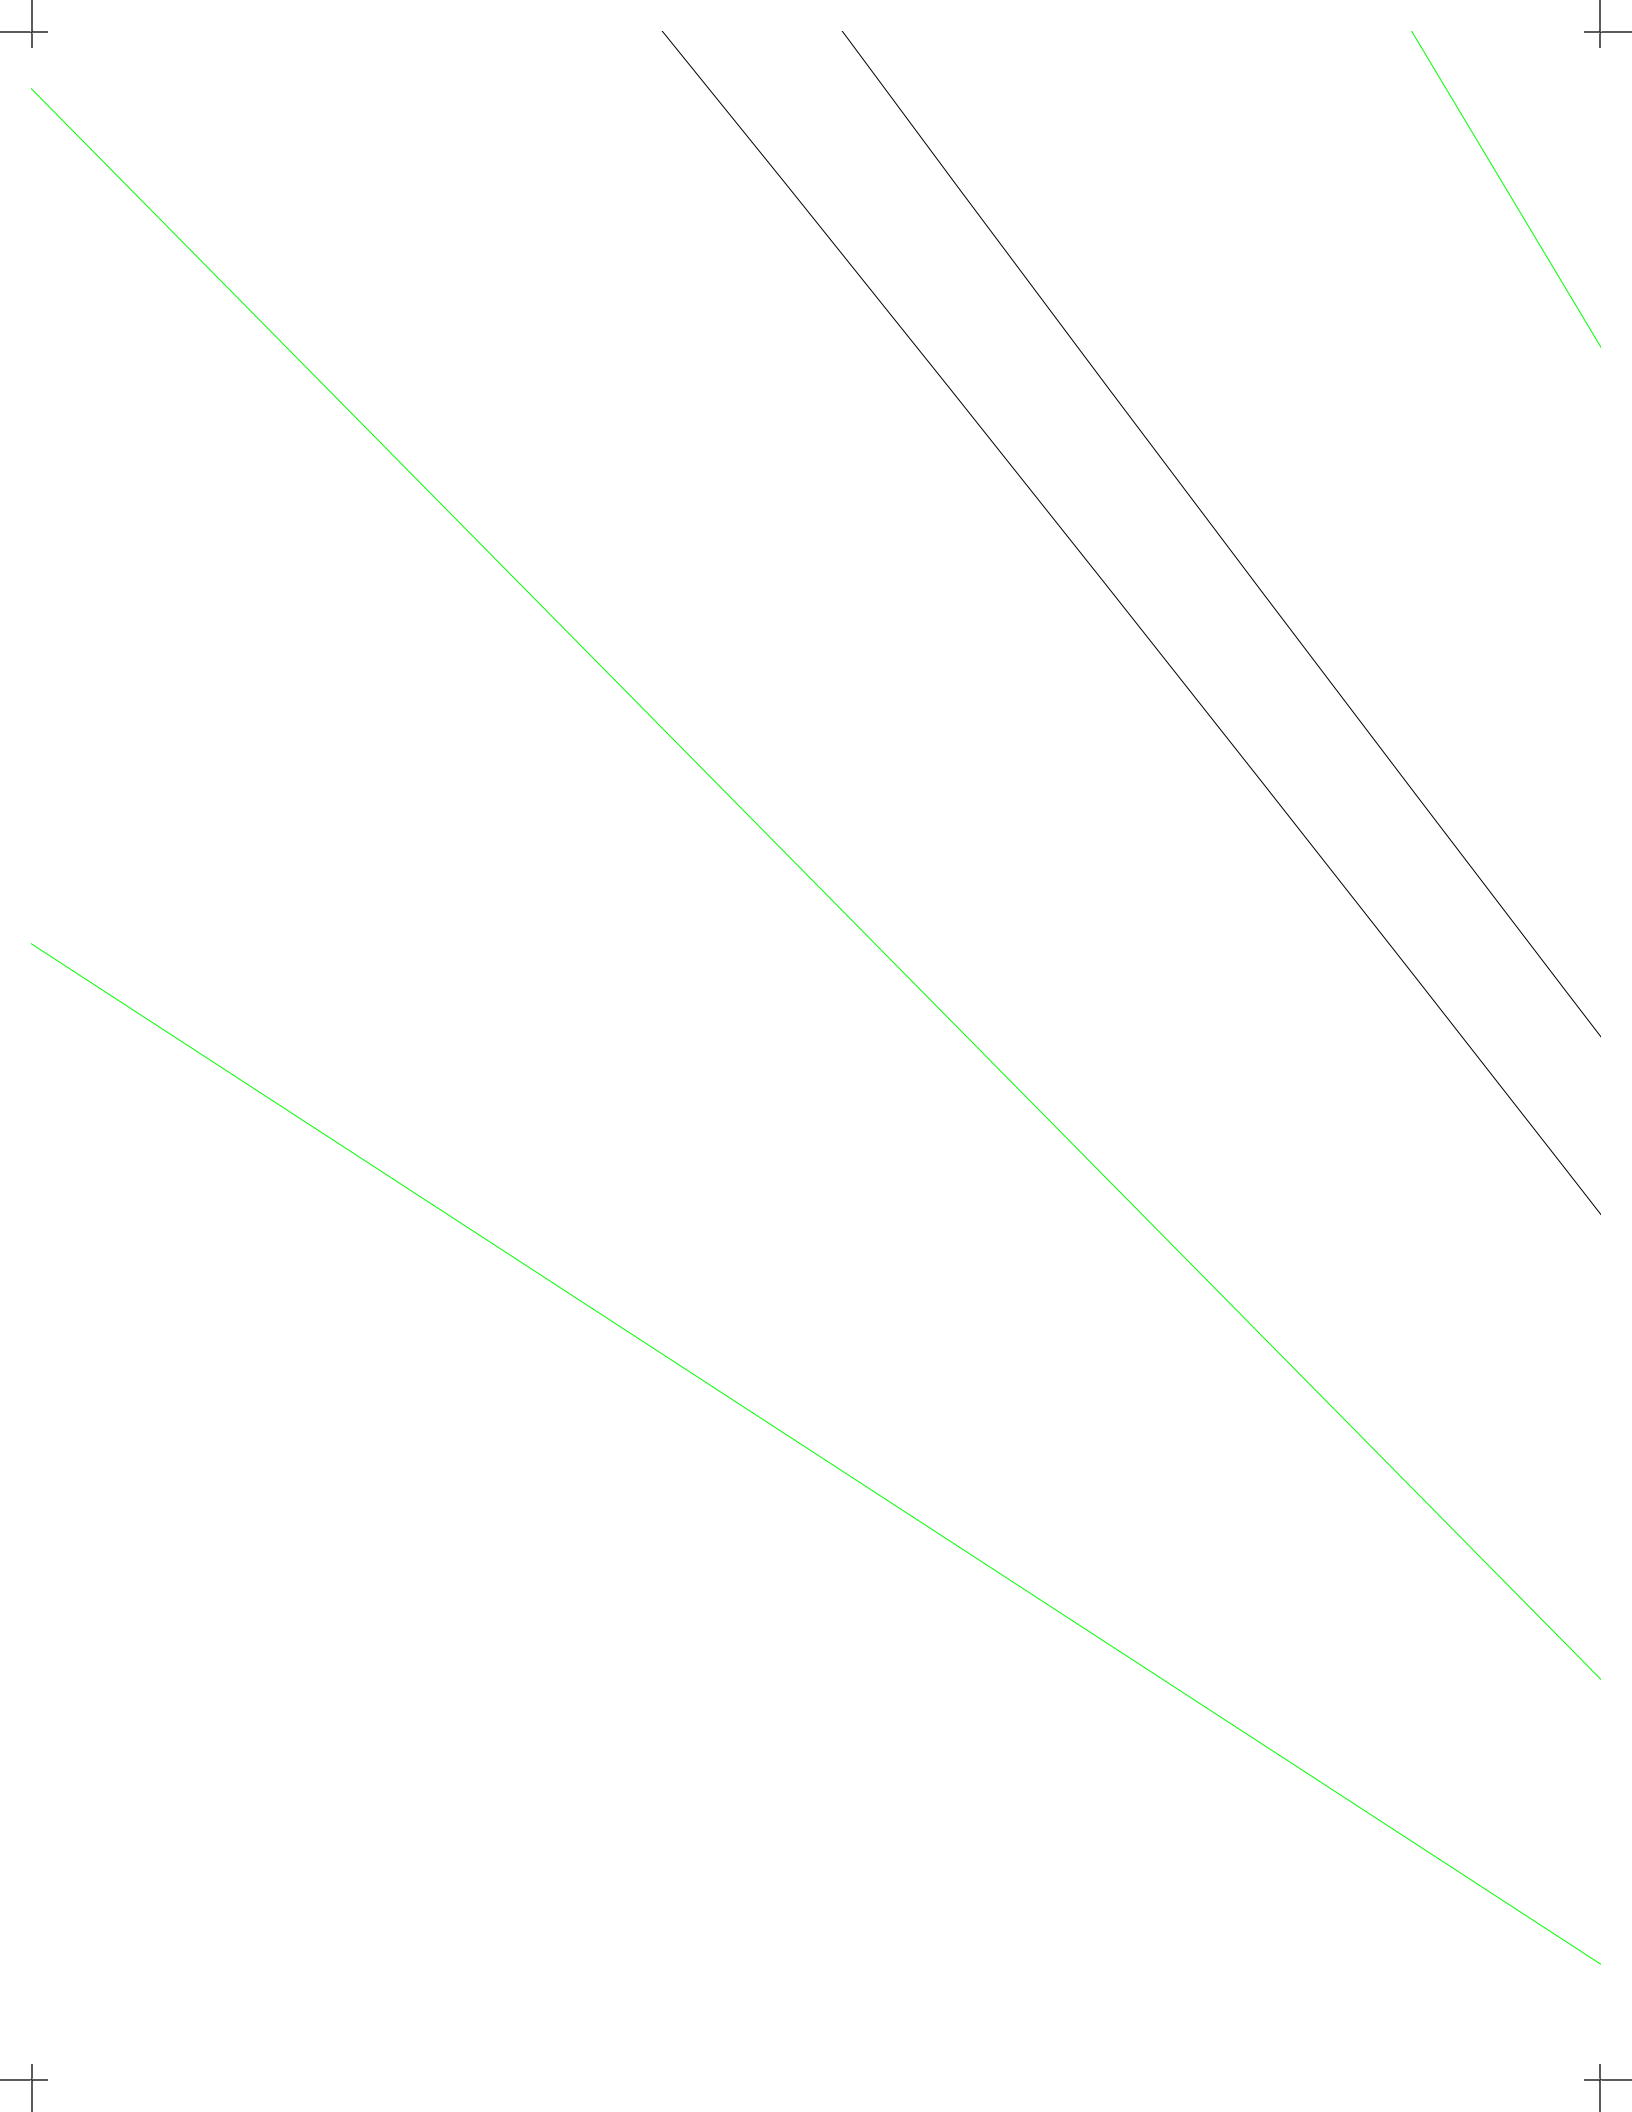


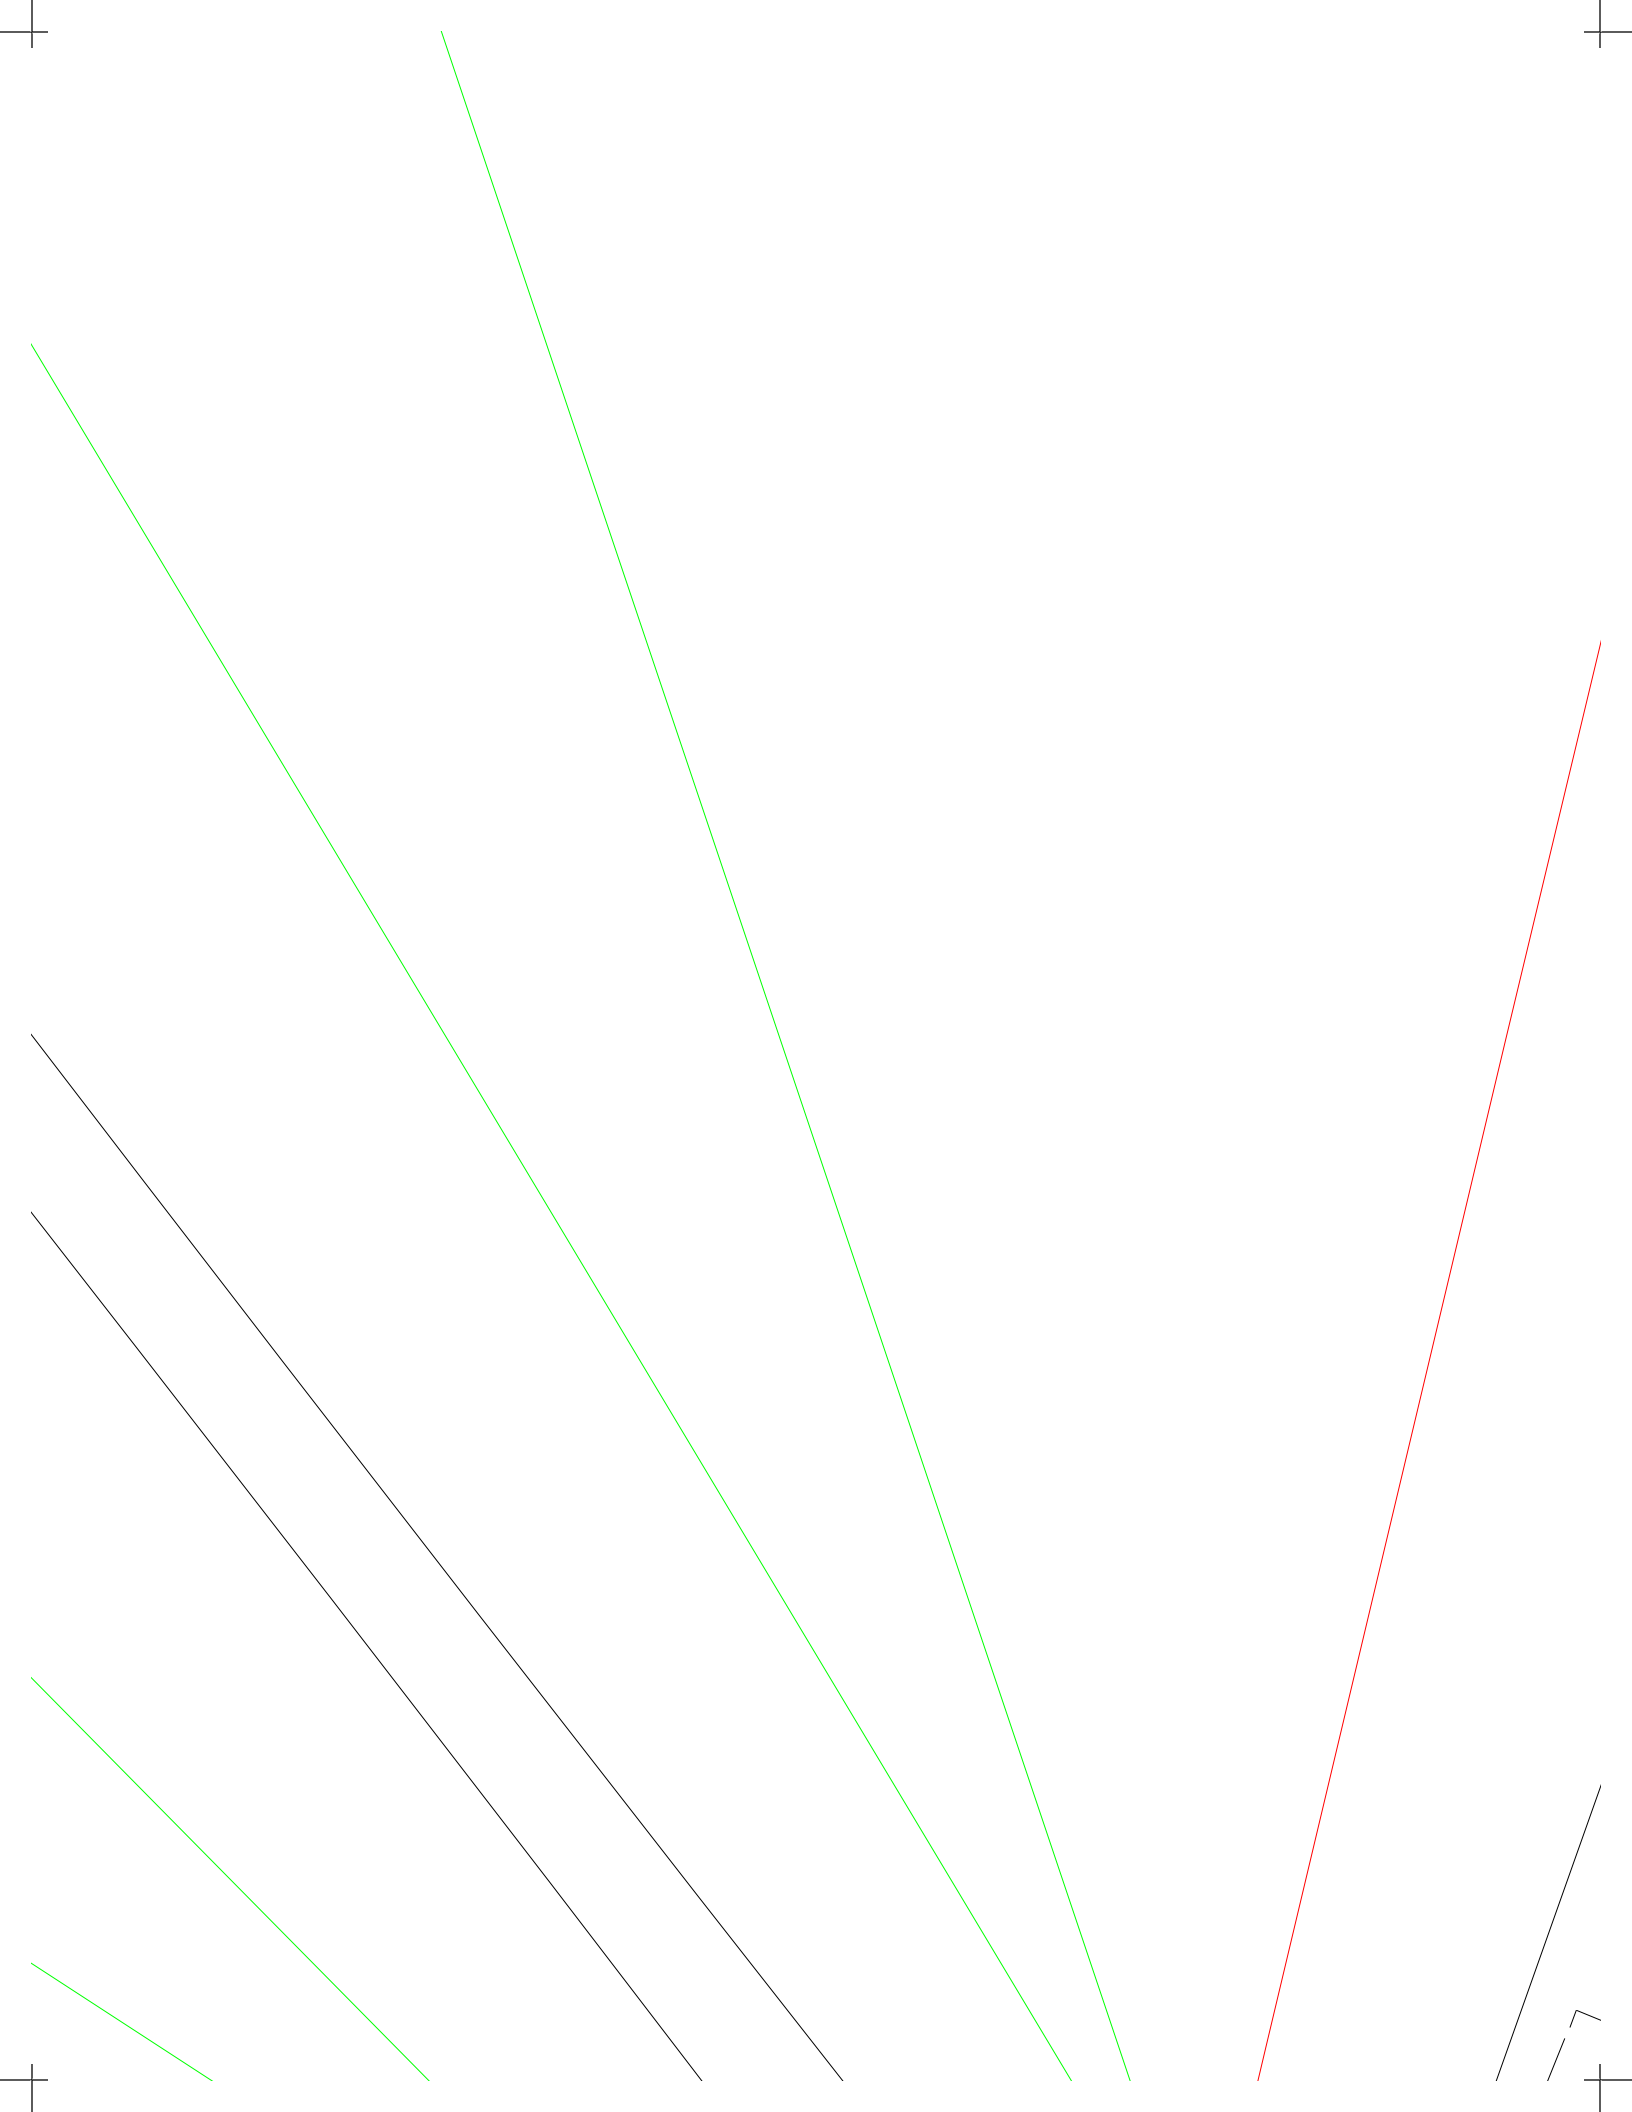





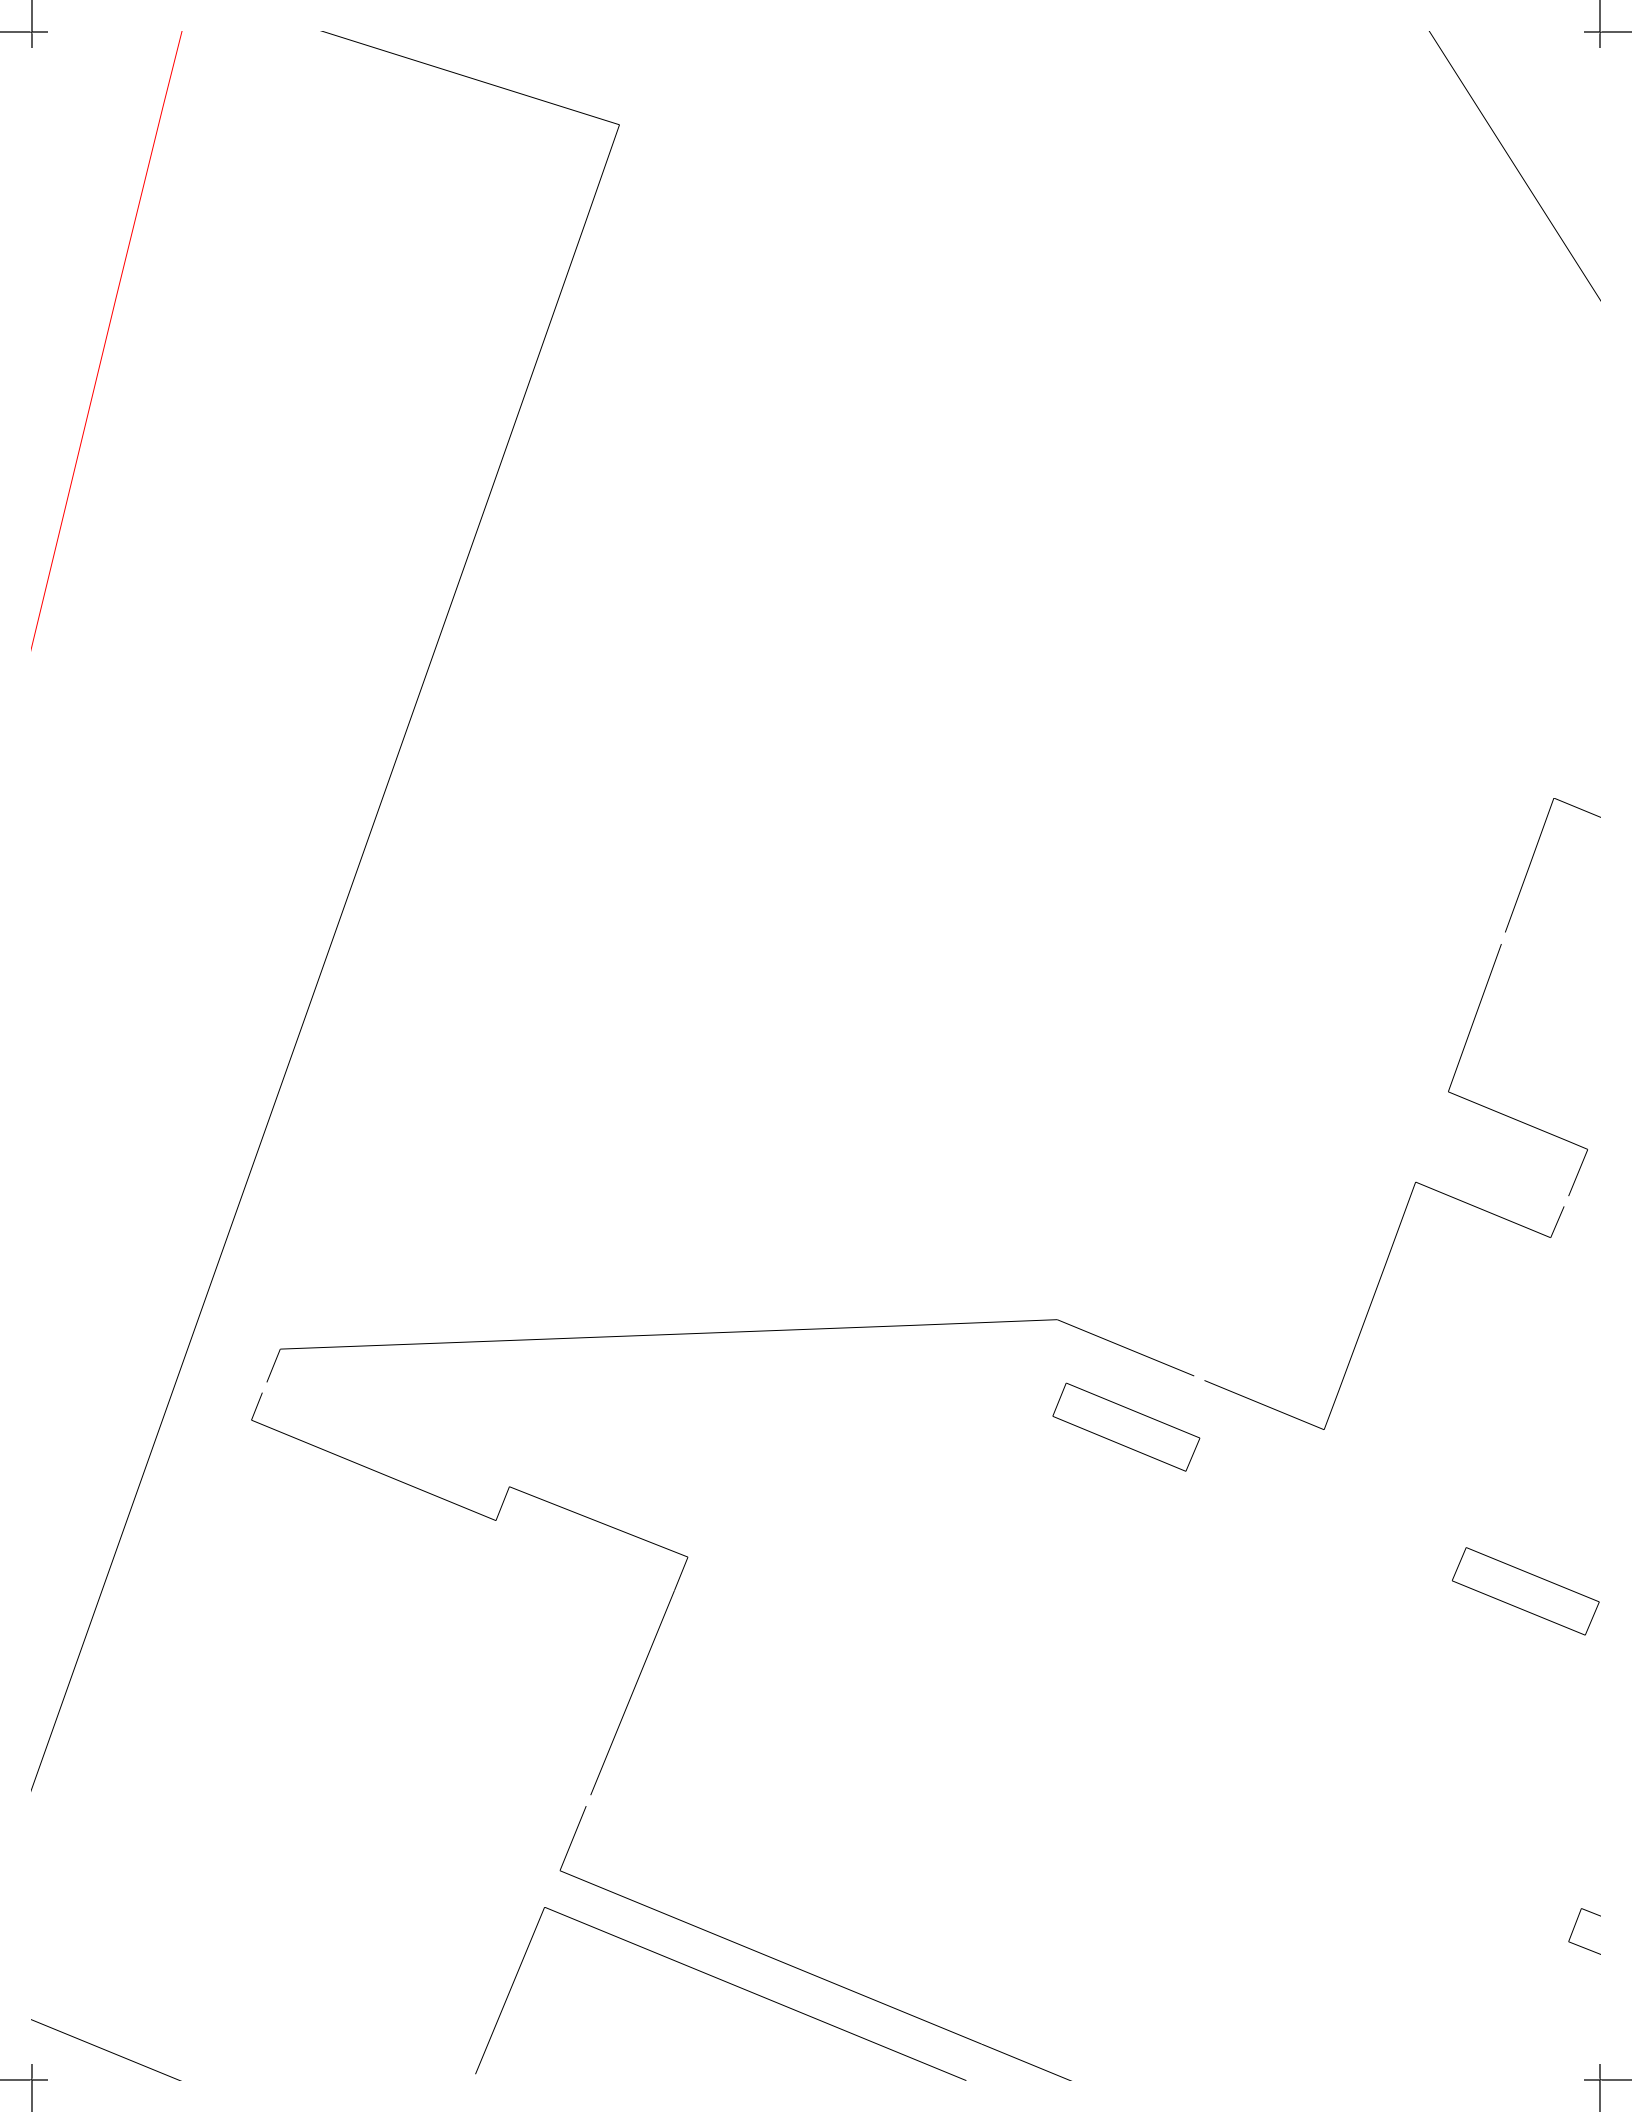


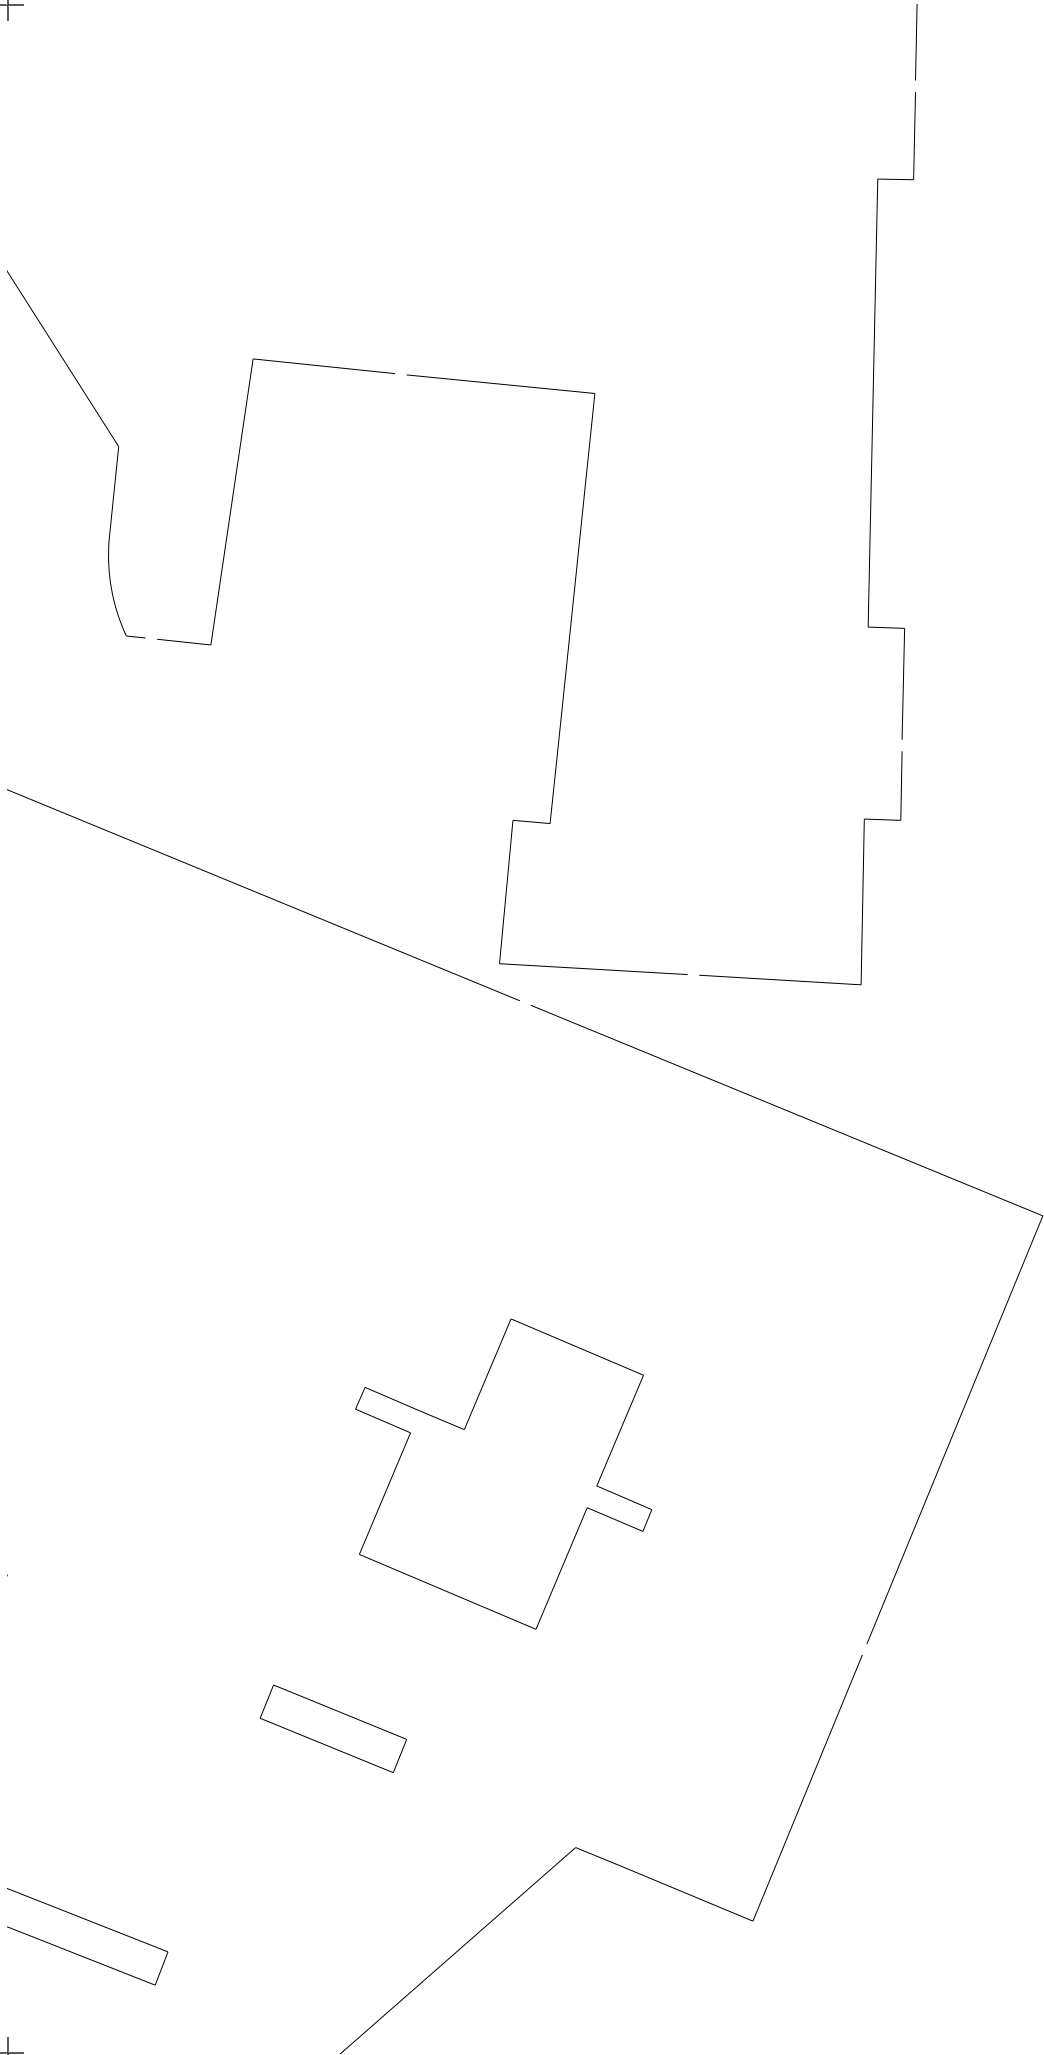

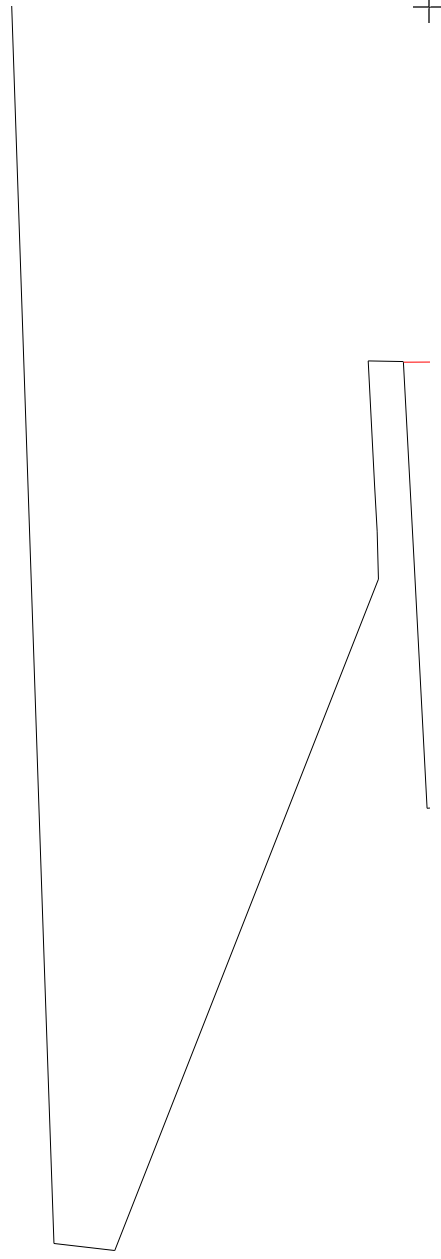

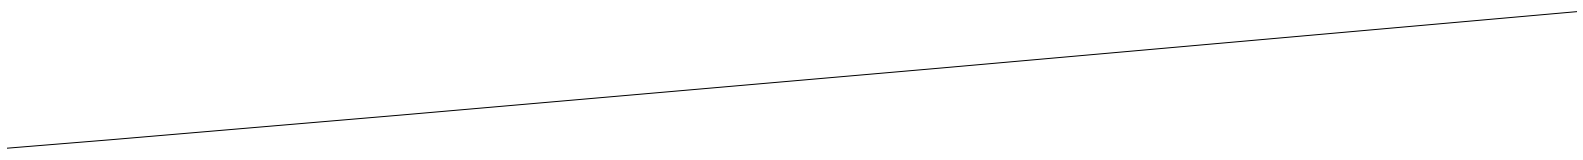


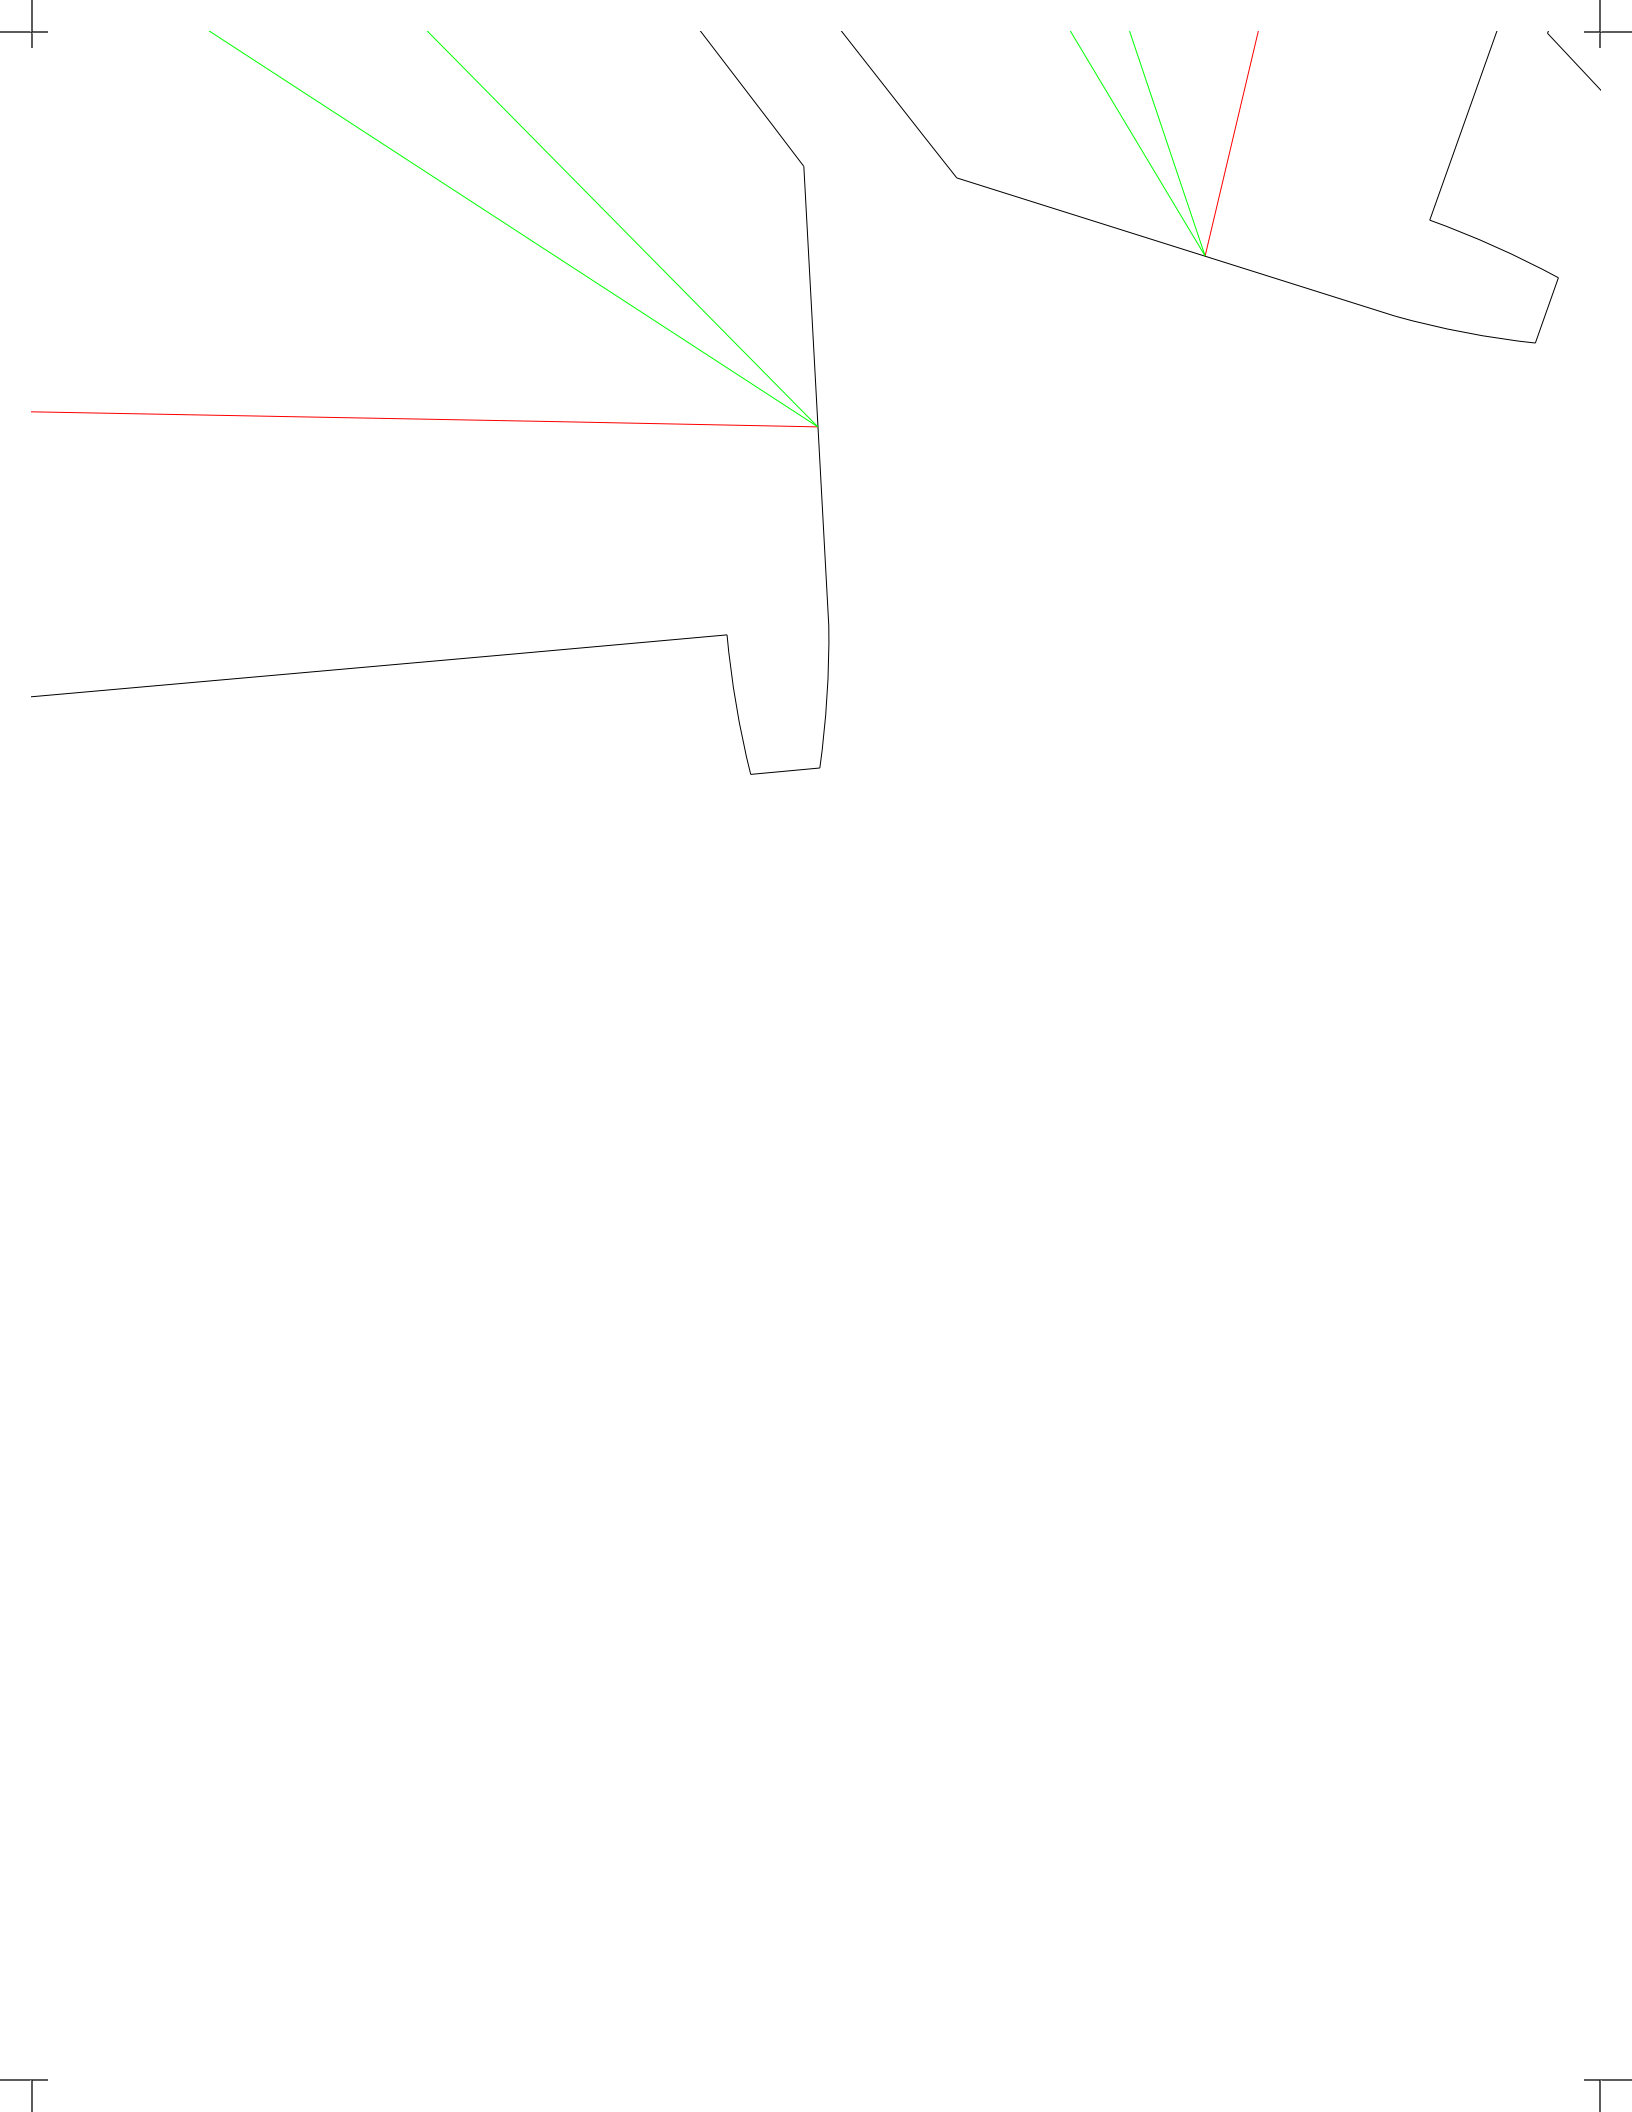

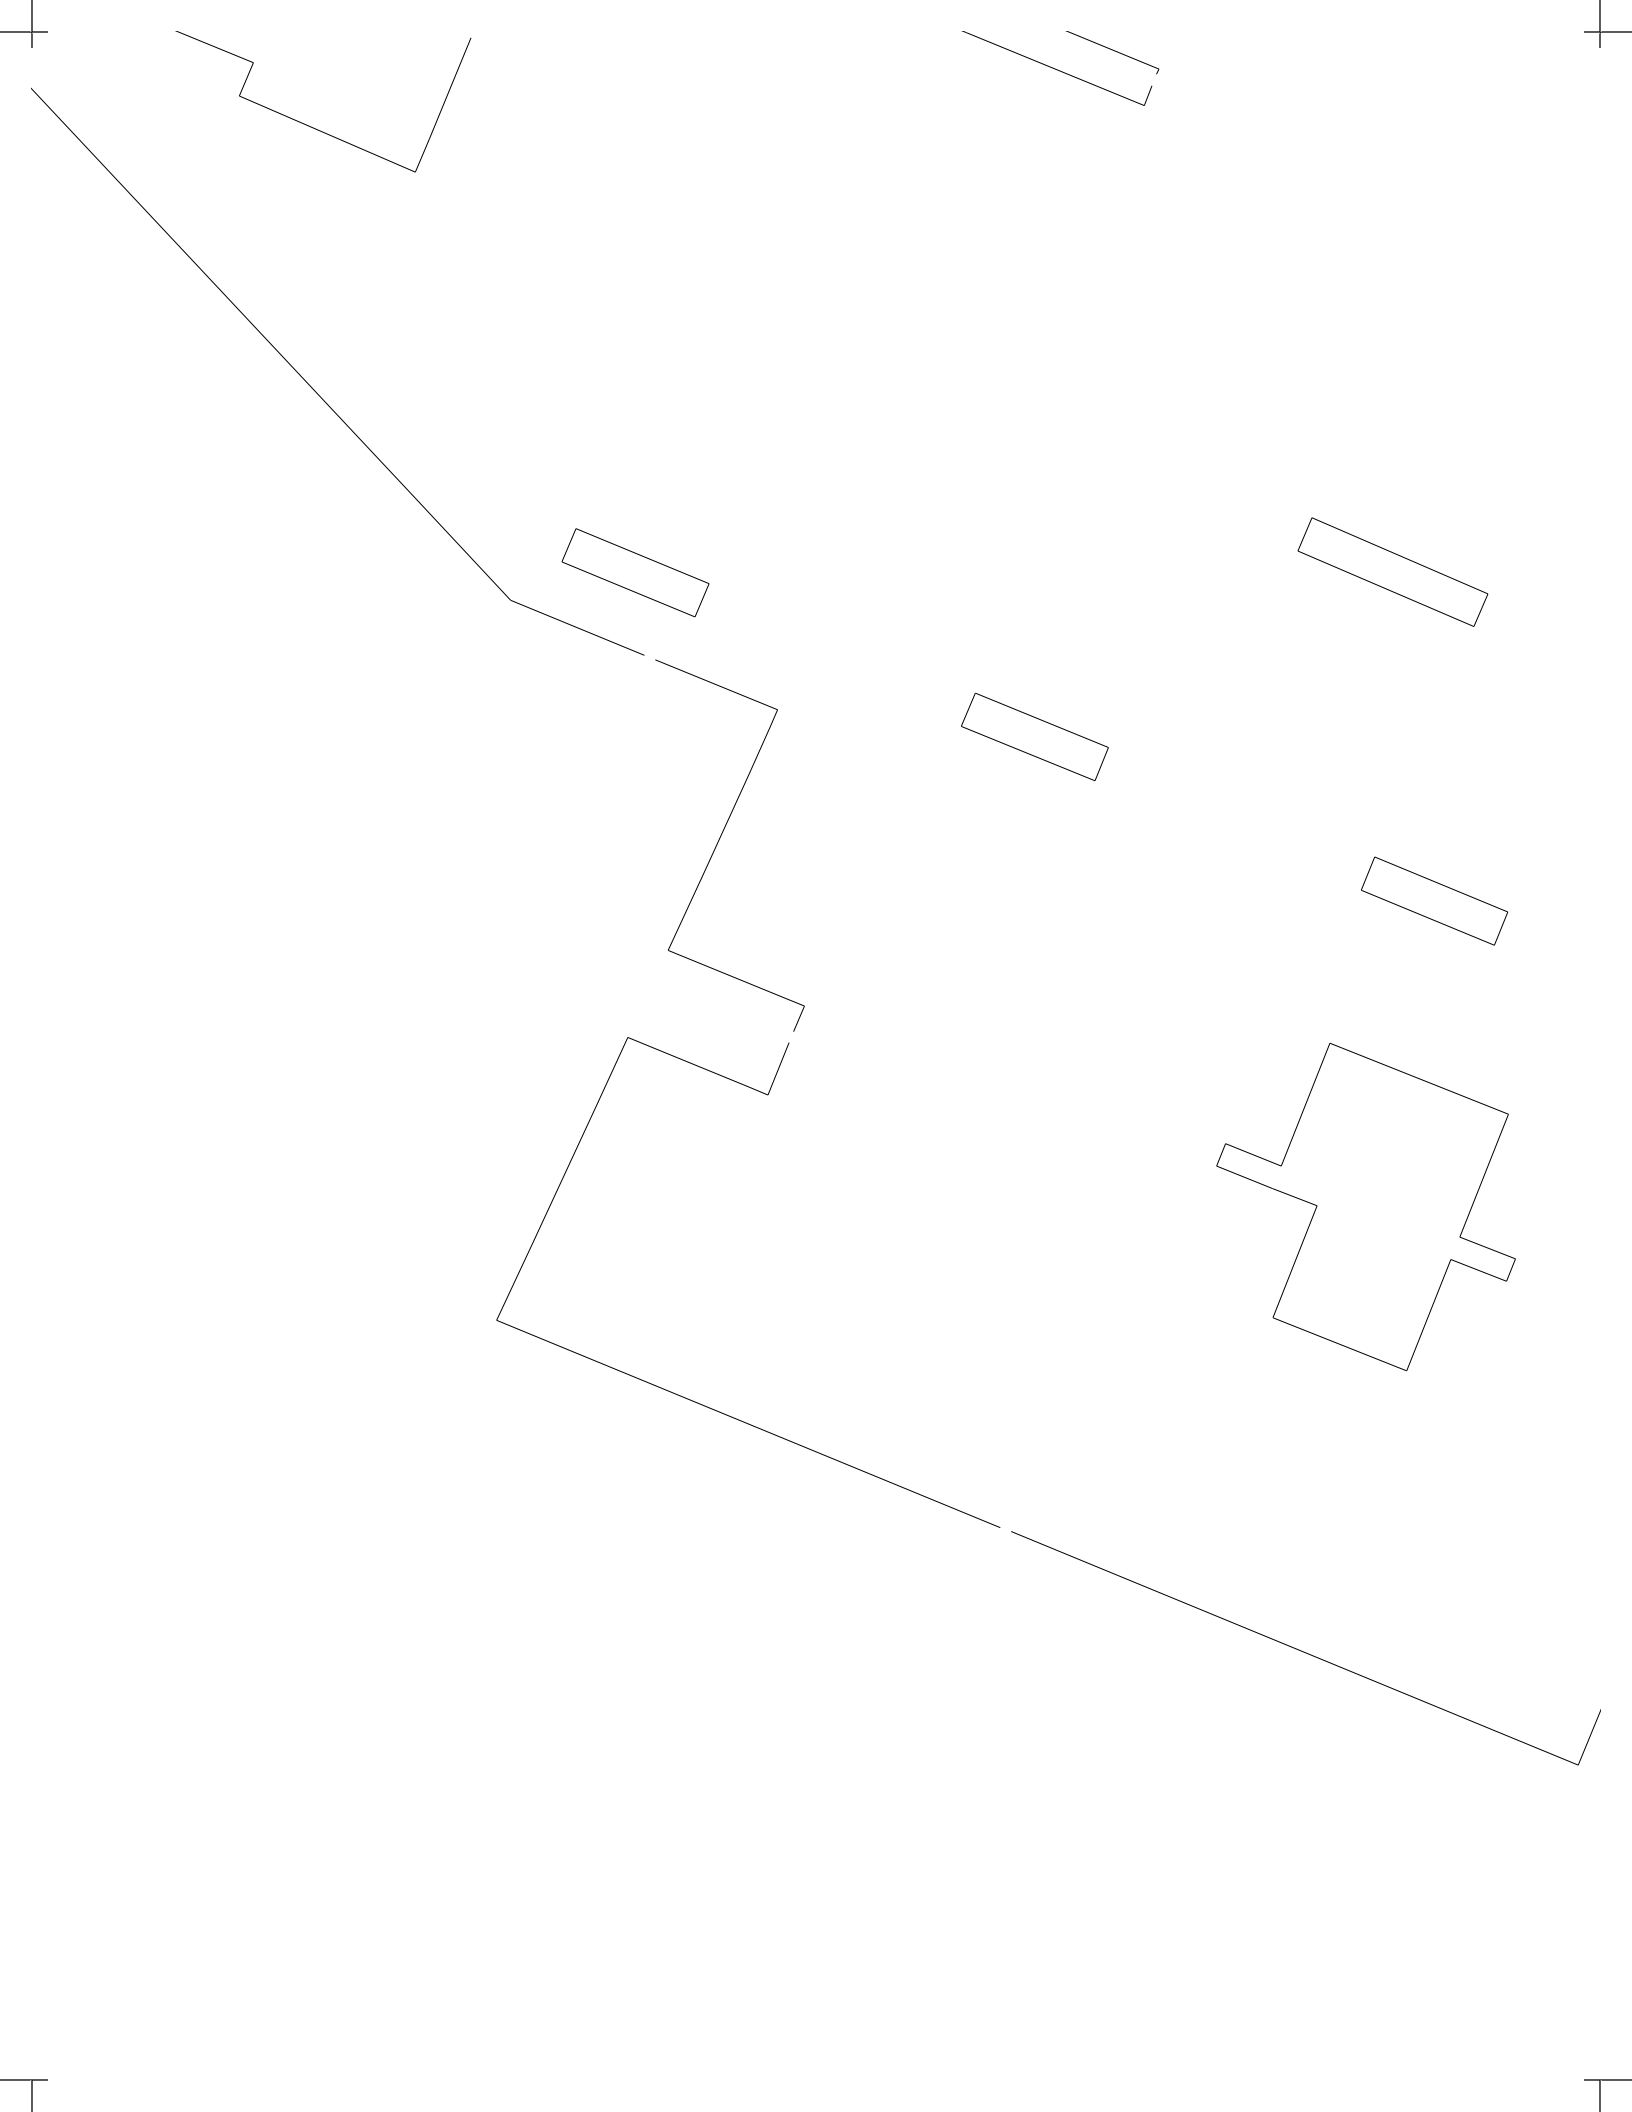



[www.mesarcfoamfighters.com](http://www.mesarcfoamfighters.com)



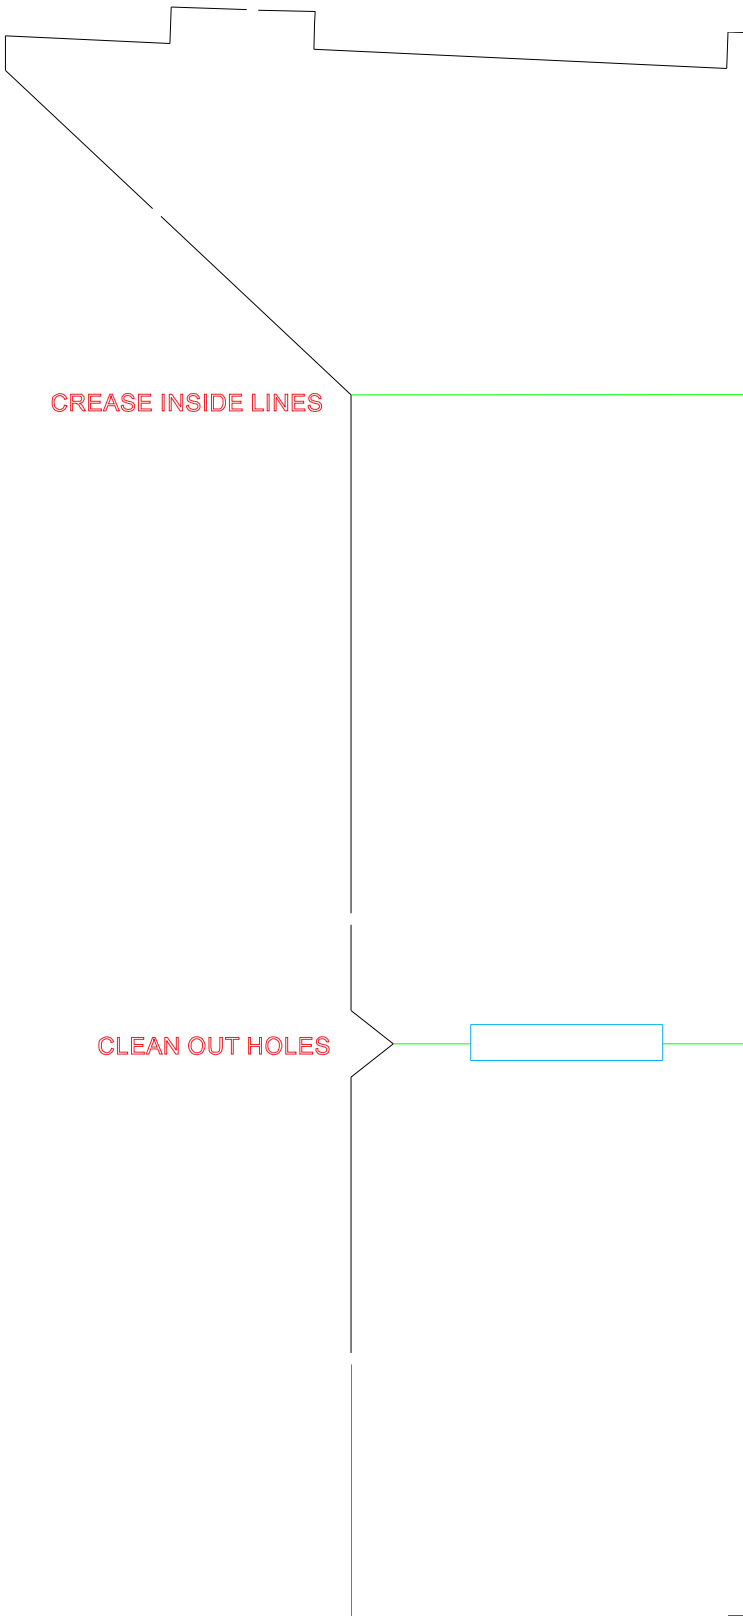



CREASE INSIDE LINES

CLEAN OUT HOLES






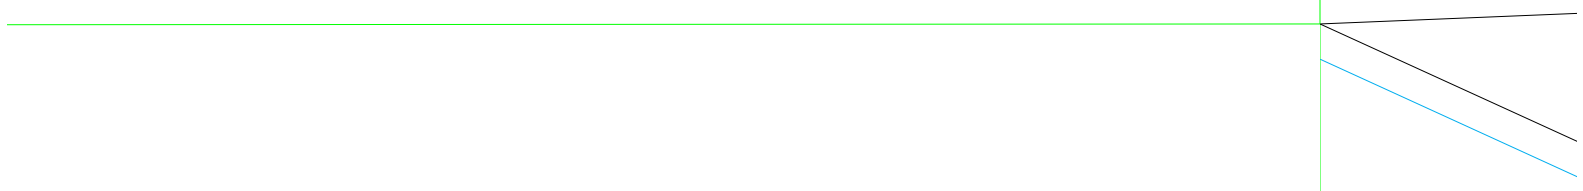


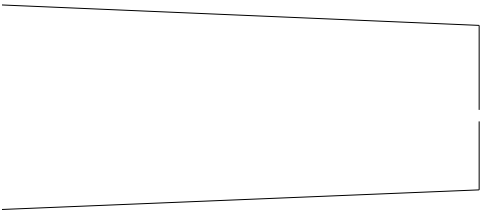

REMOVE INNER LINED SECTION  
AT TAIL END

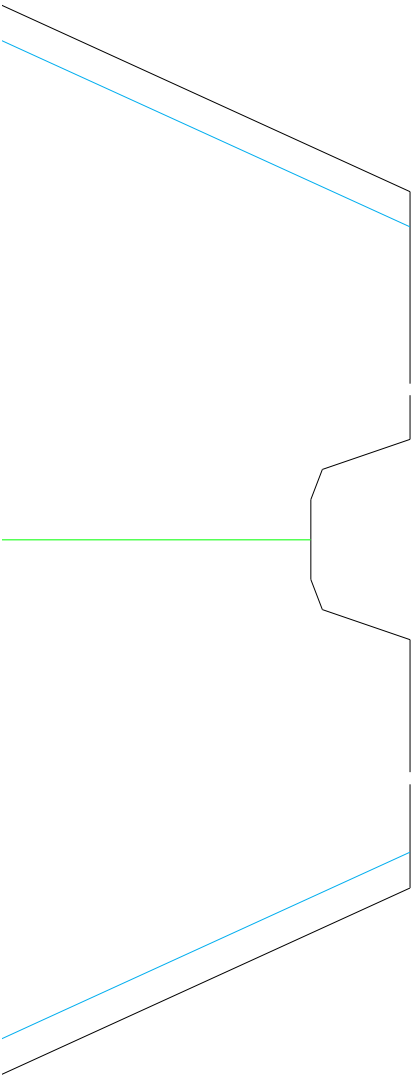


CREASE INSIDE LINES

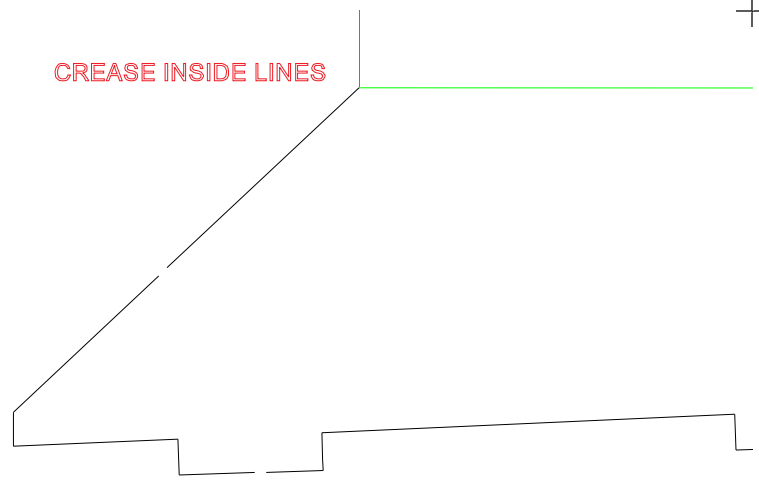



BOTTOM INTA

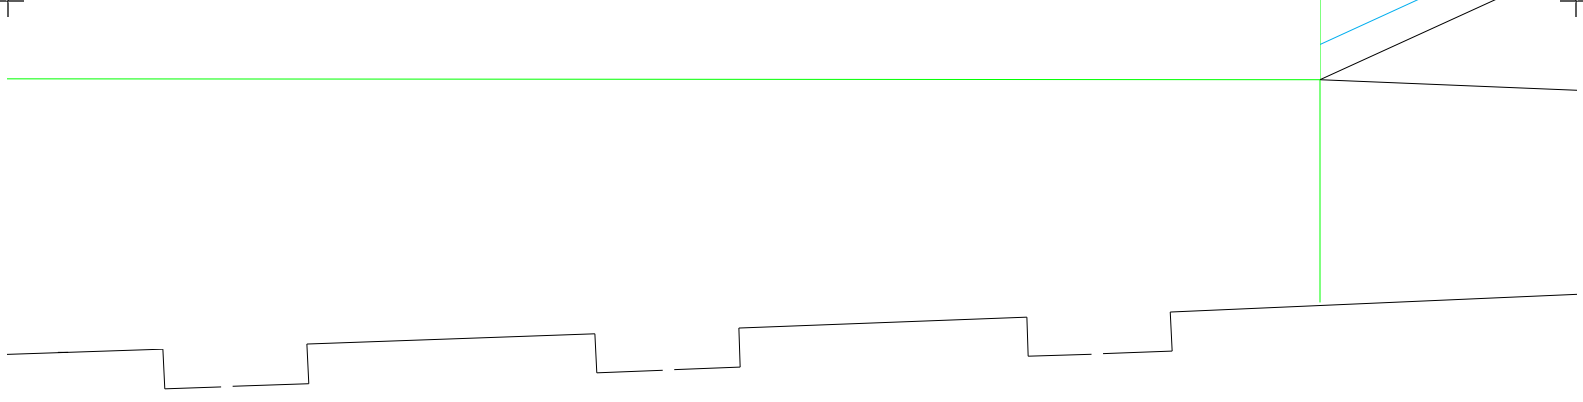

.KE PAN

