




INSTALL INSTRUCTIONS FOR:

Gotboost Performance Catch Can Breather System

The Gotboost breather kit consists of two separate catch can systems. One can catches any oil mist from the valve cover vents, while the other can filters out any oil ejected from the block breather. Periodic draining of the cans is required via the supplied petcock on the bottom of the canister, but if your engine is in correct working order with regards to ring seal, the frequency of this will be very minimal. Very high horsepower/boost applications will of course see more oil caught, especially with continual high speed high load applications.

Step 1.

Fasten the catch can mounting bracket to the timing cover. You will use the factory bolts. The 8mm hole fastens to the ground strap bolt on the passenger side. The 6mm hole side, the bolts goes through the catch can bracket first and then the bracket rests on top of the boost solenoid cross-over pipe bracket.

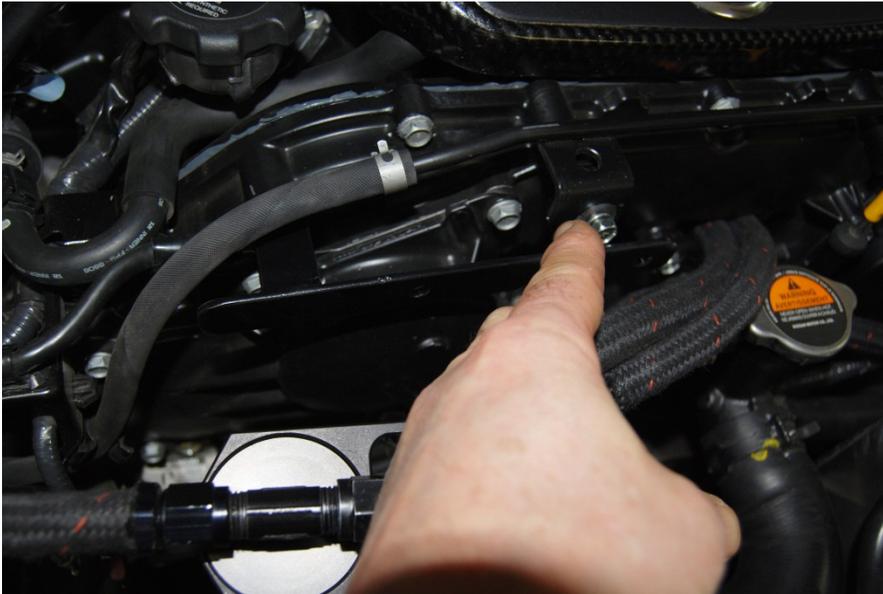


Step 2.

Route all hoses in the proper orientation sa shown in the pictures.



Lines are labeled for your convenience on the hoses you receive. Some trimming may be necessary depending on your application. Pictures of hose orientations, as the driver's side valve cover vent snakes through the timing cover next to the water neck and up over the valve cover looping around to the valve cover vent fittings.



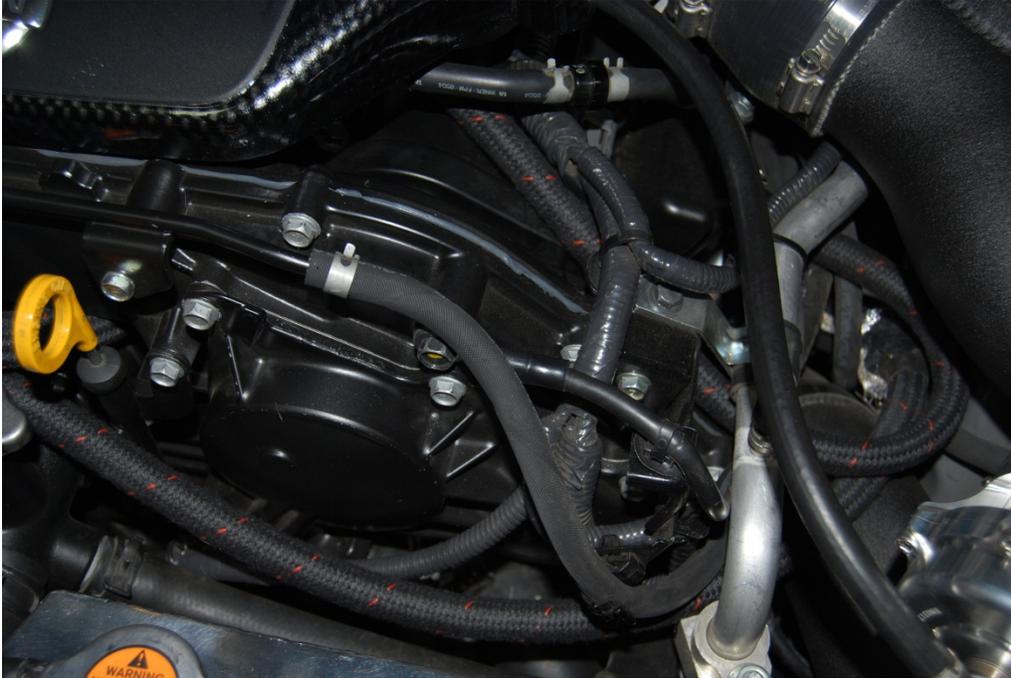

Step 3.

Block vent can be modified without removing the intake manifold using the supplied barb fitting. Remove the block vent from the intake manifold and using the supplied rubber 3/8" cap install on the intake to cap it off. Use the barb and install it into the block vent hose and clamp it with supplied clamp. Install the upper block vent can hose to the other side of the barb fitting. This hose can reside next to the fuel rails out through the timing cover then to the can.





Step 4.

Terminate the rest of the hoses to their respective locations. Depending on the application, there may be some trimming of the hose required. Use supplied zip ties to secure the hose on the passenger side.

Install finished picture:

